

FS 260, 360

**STIHL**



2 - 44      Instruction Manual



## Contents

1	Guide to Using this Manual.....	2
2	Safety Precautions and Working Techniques.....	3
3	Approved Combinations of Cutting Attachment, Deflector, Limit Stop and Harness..	12
4	Mounting the Bike Handle.....	13
5	Fitting the Carrying Ring.....	17
6	Adjusting the Throttle Cable.....	17
7	Mounting the Deflector.....	17
8	Mounting the Cutting Attachment.....	18
9	Fuel.....	24
10	Fueling.....	25
11	Fitting the Full Harness.....	25
12	Balancing the Machine.....	27
13	Starting / Stopping the Engine.....	28
14	Transporting the Unit.....	30
15	Operating Instructions.....	32
16	Air filter.....	33
17	Adjusting the Carburetor.....	33
18	Winter Operation.....	34
19	Spark Plug.....	35
20	Engine Running Behavior.....	36
21	Storing the Machine.....	36
22	Sharpening Metal Cutting Blades.....	36
23	Maintaining the Mowing Head.....	37
24	Inspection and Maintenance by User.....	38
25	Inspections and Maintenance by Dealer... ..	39
26	Maintenance and Care.....	40
27	Main Parts.....	41
28	Specifications.....	42
29	Maintenance and Repairs.....	43
30	Disposal.....	44
31	EC Declaration of Conformity.....	44

Dear Customer,

Thank you for choosing a quality engineered STIHL product.

It has been built using modern production techniques and comprehensive quality assurance. Every effort has been made to ensure your satisfaction and trouble-free use of the product.

Please contact your dealer or our sales company if you have any queries concerning this product.

Your



Dr. Nikolas Stihl

## 1 Guide to Using this Manual

### 1.1 Pictograms

The meanings of the pictograms attached to the machine are explained in this manual.

Depending on the model concerned, the following pictograms may be attached to your machine.



Fuel tank; fuel mixture of gasoline and engine oil



Operate decompression valve



Manual fuel pump



Operate manual fuel pump



Tube of grease



Intake air: Summer operation

 


Intake air: Winter operation



Handle heating

### 1.2 Symbols in text



**WARNING**

Warning where there is a risk of an accident or personal injury or serious damage to property.

*NOTICE*

Caution where there is a risk of damaging the machine or its individual components.

### 1.3 Engineering improvements

STIHL's philosophy is to continually improve all of its products. For this reason we may modify

the design, engineering and appearance of our products periodically.

Therefore, some changes, modifications and improvements may not be covered in this manual.

## 2 Safety Precautions and Working Techniques



Special safety precautions must be observed when operating a power tool.



It is important that you read and understand the User Manual before commissioning and keep it in a safe place for future reference. Non-compliance with the User Manual may cause serious or even fatal injury.

Observe all applicable local safety regulations, e.g. by trade organizations, social insurance institutions, labor safety authorities etc.

If you have never used a power tool before: Have your dealer or other experienced user show you how to operate your machine – or attend a special course to learn how to operate it.

Minors should never be allowed to use the machine – except for apprentices over the age of 16 when working under supervision.

Children, animals and onlookers must remain at a safe distance.

When not using the machine, it must be laid down in such a way that it does not endanger anyone. Ensure that the machine cannot be used without authorization.

The user is responsible for accidents or risks involving third parties or their property.

Do not lend or rent your power tool without the User Manual. Be sure that anyone using it understands the information contained in this manual.

The use of machines that emit noise may be limited to certain hours of the day as specified by national and/or regional or local regulations.

Anyone operating the machine must be well rested, in good physical health and in good mental condition.

If you have any condition that might be aggravated by strenuous work, check with your doctor before operating a machine.

If you have a pacemaker: The ignition system of your machine produces an electromagnetic field of very low intensity. This field may interfere with some pacemakers. STIHL recommends that persons with pacemakers consult their physician and the pacemaker manufacturer to reduce any health risk.

Anyone who has consumed alcohol or drugs or medicines affecting their ability to react must not operate a power tool.

Depending on the cutting attachment fitted, use your power tool only for cutting grass, wild growth, shrubs, scrub, bushes, small diameter trees and similar materials.

The machine must not be used for any other purposes – **risk of accidents!**

Only use cutting attachments and accessories that are explicitly approved for this power tool model by STIHL or are technically identical. If you have any questions in this respect, consult your dealer. Use only high-quality parts and accessories. In order to avoid the risk of accidents and damage to the machine.

STIHL recommends the use of genuine STIHL tools and accessories. They are specifically designed to match the product and meet your performance requirements.

Never attempt to modify your power tool in any way since this may increase the risk of personal injury. STIHL excludes all liability for personal injury and damage to property caused while using unauthorized attachments.

Do not use a high-pressure washer to clean the power tool. The solid jet of water may damage parts of the unit.

The guard provided with your machine may not protect the operator from all foreign objects (gravel, glass, wire etc.) ejected by the revolving cutting attachment. Ejected objects may also ricochet and strike the operator.

### 2.1 Clothing and equipment

Wear proper protective clothing and equipment.



Clothing must be sturdy but allow complete freedom of movement. Wear close-fitting clothes such as a boiler suit, not a loose jacket.

Do not wear clothing which could become trapped in wood, brush or moving parts of the machine. Do not wear a scarf, necktie or jewelry.

Tie up and confine long hair above your shoulders.



Wear safety boots with steel toe caps and non-slip soles.

Sturdy shoes with non-slip soles are permissible only when using mowing heads.



#### WARNING



To reduce the risk of eye injuries, wear close-fitting safety glasses in accordance with European Standard EN 166. Make sure the safety glasses are a snug fit.

Wear face protection and make sure it is a good fit. Face protection alone is not sufficient to protect the eyes.

Wear "personal" sound protection, e.g. ear defenders.


Wear a safety hard hat for thinning operations, when working in high scrub and where there is a danger of head injuries from falling objects.



Wear sturdy protective gloves made of a resistant material (e. g. leather).

STIHL can supply a comprehensive range of personal protective equipment.

## 2.2 Transporting the machine

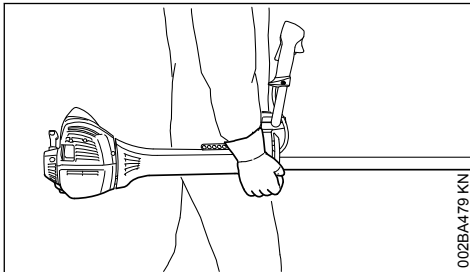

002BA479 KN

Always stop the engine.

Carry the machine hanging on the harness or by the shaft so that it is balanced.

To reduce the risk of cut injuries, fit transport guard on the metal cutting attachment, even when carrying the tool for short distances – see also "Transporting the Unit".



Avoid touching hot parts of the machine and gearbox – **risk of burns!**

By vehicle: When transporting in a vehicle, properly secure your machine to prevent turnover, damage and fuel spillage.

## 2.3 Refueling



**Gasoline is highly flammable** – keep away from fire or flame – do not spill any fuel – no smoking.

Always shut off the engine before refueling.

Do not fuel a hot engine – **fuel may spill and cause a fire.**

Open the fuel cap carefully to allow any pressure build-up in the tank to release slowly and to prevent fuel spraying out.

Only refuel the machine in a well ventilated place. If fuel has been spilled, immediately clean the machine – do not allow your clothes to be splashed with fuel. If that happens, change your clothes at once.



After refueling, close the fuel cap as tightly as possible.



This helps reduce the risk of engine vibrations causing an incorrectly tightened fuel cap to loosen or come off and spill fuel.

Check for leaks. Do not start the engine if there is a fuel leak – **serious or fatal burns could result!**

## 2.4 Before starting

Check that your power tool is properly assembled and in good condition – refer to appropriate chapters in the User Manual.

- Check the fuel system for leaks, especially the visible parts, e. g., fuel cap, hose connections, manual fuel pump (only in machines with a manual fuel pump). In case of leakage and damage, do not start the engine – **risk of fire!** Have the machine serviced by a dealer before using it
- Use only an approved combination of cutting attachment, deflector, handle and harness. All parts must be assembled properly and securely
- The stop switch must be easy to push
- Check the choke lever, throttle trigger and throttle trigger lockout for smooth action – throttle trigger must return automatically to idle

position. The choke lever must spring back from the  and  positions to the run position I when the throttle trigger lockout and throttle trigger are squeezed

- Check that the spark plug boot is secure – a loose boot may cause sparking that could ignite combustible fumes **and cause a fire!**
- Cutting attachment or interchangeable attachment: correctly fitted, secure and in perfect condition
- Safety devices (e. g., deflector for cutting attachments, rider plate) for damage and/or wear. Always replace damaged parts. Do not use the machine with a damaged deflector or worn rider plate (if the writing and arrows are no longer discernible)
- Never attempt to modify the controls or safety devices.
- Keep the handles dry and clean – free from oil and dirt – this is important for safe control of the machine
- Adjust the harness and handle(s) to suit your height and reach Note the information in the chapters "Fitting the Harness" and "Balancing the Machine".

**To reduce the risk of personal injury**, do not operate your power tool if it is damaged or not properly assembled!

To prepare for emergencies when using a harness: Practice setting down the machine quickly. To avoid damage, do not throw the unit to the ground when practicing.

## 2.5 Starting the engine

Start the engine at least 3 meters from the fueling spot, outdoors only.

Place the unit on firm ground in an open area. Make sure you have good balance and secure footing. Hold the unit securely. The cutting attachment must be clear of the ground and all other obstructions because it may begin to run when the engine starts.

This is a one-person machine – ensure that there is no-one within 15 meters of the machine, not even when starting the power tool! **Risk of injury** due to ejected objects!



Avoid contact with the cutting attachment – **risk of injury!**



Do not drop-start the power tool – start the engine as described in the User Manual. The cutting attachment runs on for a short while after releas-

ing the throttle trigger – **coasting effect!**


Check engine idling: The cutting attachment must remain at a standstill when the engine idles – throttle trigger released.

Keep easily combustible materials (e. g., wood chips, bark, dry grass, fuel) away from hot exhaust gases and hot muffler surfaces – **risk of fire!**

## 2.6 Holding and guiding the machine

Always hold the unit firmly with both hands on the handles.

Make sure you always have a firm and secure footing.

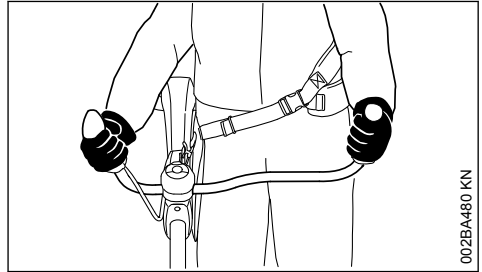


Right hand on control handle, left hand on grip on handlebar.

## 2.7 While working

Make sure you always have a firm and secure footing.

In the event of imminent danger or in an emergency, push the stop switch to stop the engine.

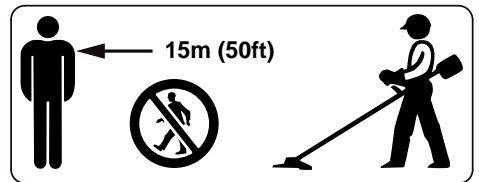

There is a risk of accident from ejected objects within a wide area around the working space, so you must ensure that there is no-one within a 15 m radius of the machine. This distance must also be maintained in relation to objects (vehicles, window panes) – **risk of property damage!** Even at distances beyond 15 m, the danger cannot be ruled out.

Check that the engine is properly idling so that the cutting tool will not continue rotating after you release the throttle trigger.

Check and correct the engine idle speed setting at regular intervals. If the cutting attachment still rotates at idle speed, have your dealer make proper adjustments or repairs. STIHL recommends you have this work done by a STIHL servicing dealer.

Take special care in slippery conditions – **damp, snow, ice**, on slopes or uneven ground.

Watch out for obstacles: tree stumps, roots – **risk of tripping or stumbling!**

Only work while standing on the ground, never on a ladder, work platform or other unstable surface.

Be particularly alert and cautious when wearing hearing protection because your ability to hear warnings (shouts, alarms, etc.) is restricted.

Take breaks when you start getting tired or feeling fatigue – **risk of accidents!**

Work calmly and carefully – in daylight conditions and only when visibility is good. Proceed with caution, do not put others in danger.



As soon as the engine is running, the power machine generates toxic exhaust gas. As soon as the engine is running, the power machine generates toxic exhaust gas. These gases may be odorless and invisible and may contain unburned hydrocarbons and benzene. Never run the engine indoors or in poorly ventilated locations, even if your model is equipped with a catalytic converter.

To reduce the risk of **serious or fatal injury from breathing toxic fumes**, ensure proper ventilation when working in trenches, hollows or other confined locations.

Stop work immediately if you start suffering from nausea, headaches, impaired vision (e.g. your field of vision gets smaller), impaired hearing, dizziness, or impaired concentration – these symptoms may possibly be the result of too-high exhaust gas concentration – **Risk of accidents!**


Operate your power tool so that it produces a minimum of noise and emissions – do not run the engine unnecessarily, accelerate the engine only when working.

**To reduce the risk of fire, do not smoke** while operating or standing near your power tool. Combustible fuel vapor may escape from the fuel system.

Dust, fumes and smoke produced while working may be hazardous to health. Wear respiratory protection in case of heavy dust or smoke emission.

If your power tool is subjected to unusually high loads for which it was not designed (e.g. heavy impact or a fall), always check that it is in good condition before continuing work – see also "Before Starting".

Check in particular that the fuel system has no leaks and the safety equipment is fully operative. Never use a power tool that is no longer safe to operate. In case of doubt, contact a dealer.

Do not operate your power tool with the choke lever in the warm start position  – the engine speed cannot be controlled in this position.



To **reduce the risk of injury** from ejected objects, never operate the unit without the correct deflector for the type of cutting attachment being used.



Check the work site – rocks, metal objects etc. could get caught up and ejected – potentially beyond a distance of 15 m – **risk of injury!** Such objects can also damage the cutting attachment and other property (e.g. parked vehicles, windows).

Be particularly careful when working on difficult, densely grown terrain.

When mowing in high shrubbery, under shrubbery and hedges: Hold the cutting tool at a working height of at least 15 cm – avoid risks to animals.

Always shut off the engine before leaving the unit unattended.

Examine the cutting attachment periodically at short intervals and as soon as you note any noticeable changes:

- Stop the engine, hold the machine securely, allow the cutting attachment to come to a stop
- Check condition and secure fitting; watch out for cracks
- Ensure that the cutting blades are sharp
- Replace damaged or blunt cutting attachments immediately, even in the event of minor hair-line cracks

Clean grass and plant residue off the cutting attachment mounting at regular intervals – remove any accumulated material from the cutting attachment and deflector.

To reduce the **risk of injury**, shut off the engine before replacing the cutting attachment.



The gearbox gets hot during operation. Never touch the gearbox – **risk of burns!**

If a metal cutting attachment strikes a rock or any other hard object, sparks may be generated that may possibly ignite combustible materials. Dried-out plants and undergrowth are combustible, especially in hot and dry weather. If there is a risk of fire, do not use cutting attachments in the vicinity of combustible materials, dried-out plants or brushwood. It is mandatory that you ask the responsible forestry office about current fire hazards.

## 2.8 Using mowing heads

Only use a deflector with a properly fitted blade, which limits the mowing line to the permissible length.

For manually adjustable mowing heads, always switch off the engine before adjusting the mowing line – **risk of injury!**

Misuse with mowing lines that are too long reduces the working speed of the engine. The constant slipping of the clutch causes overheating and damage to important components (e. g. clutch, plastic housing parts) – e. g. due to the cutting attachment rotating during idling – **risk of injury!**

## 2.9 When using metal cutting attachments

STIHL recommends the use of original STIHL metal cutting attachments. These have been optimized for the machine and the user's requirements.

Metal cutting attachments rotate very fast, generating forces acting on the attachments and on the cuttings.

Metal cutting attachments must be sharpened in regular intervals in accordance with the instructions.

Unevenly sharpened metal cutting attachments generate an imbalance which may cause extreme loads on the machine – **risk of breakage!**

Dull or improperly sharpened cutting edges can put a higher load on the cutting attachment and

increase the **risk of injury** from cracked or broken parts.

After each contact of the metal cutting attachment with hard objects (e.g. stones, rocks, metal parts), check it for damage (e.g. tears and deformation). Burrs and other visible accumulated material must be removed since it may come loose at any time while the machine is running and then be ejected – **risk of injury!**

Do not continue using or attempt to repair damaged or cracked cutting attachments by means of welding, straightening or modifying the shape (unbalanced).

Particles or pieces may come off and hit the operator or a bystander at a high speed – **risk of most severe injuries!**

To reduce the above-named risks involved in operating a metal cutting attachment, ensure that the diameter of your metal cutting attachment is not too big. Also, the attachment must not be too heavy. It must be made of high-quality materials and have a suitable geometry (shape, thickness).

A metal cutting attachment not made by STIHL must not have a different weight, thickness, shape or a larger diameter than the largest STIHL metal cutting attachment approved for this power tool – **risk of injury!**

## 2.10 Vibrations

Prolonged use of the power tool may result in vibration-induced circulation problems in the hands (whitefinger disease).

No general recommendation can be given for the length of usage because it depends on several factors.

The period of usage is prolonged by:

- Hand protection (wearing warm gloves)
- Work breaks

The period of usage is shortened by:

- Any personal tendency to suffer from poor circulation (symptoms: frequently cold fingers, tingling sensations).
- Low outside temperatures.
- The force with which the handles are held (a tight grip restricts circulation).

Continual and regular users should monitor closely the condition of their hands and fingers. If any of the above symptoms appear (e.g. tingling sensation in fingers), seek medical advice.

## 2.11 Maintenance and Repairs

Service the machine regularly. Do not attempt any maintenance or repair work not described in the instruction manual. Have all other work performed by a servicing dealer.

STIHL recommends that you have servicing and repair work carried out exclusively by an authorized STIHL servicing dealer. STIHL dealers are regularly given the opportunity to attend training courses and are supplied with the necessary technical information.

Only use high-quality replacement parts in order to avoid the risk of accidents and damage to the machine. If you have any questions in this respect, consult a servicing dealer.

STIHL recommends the use of original STIHL replacement parts. They are specifically designed to match your model and meet your performance requirements.

To reduce the risk of injury from unintentional engine startup, **always shut off the engine and disconnect the spark plug boot** before performing any repairs, maintenance or cleaning work. – Exception: Carburetor and idle speed adjustments.

Do not turn the engine over on the starter with the spark plug boot or spark plug removed since there is otherwise a **risk of fire** from uncontained sparking.

To reduce the **risk of fire**, do not service or store your machine near open flames.

Check the fuel filler cap for leaks at regular intervals.

Use only a spark plug of the type approved by STIHL and make sure it is in good condition – see "Specifications".

Inspect the ignition lead (insulation in good condition, secure connection).

Check the condition of the muffler.

To reduce the **risk of fire and damage to hearing**, do not operate your machine if the muffler is damaged or missing. –

Do not touch a hot muffler since **burn injury** will result.

Vibration behavior is influenced by the condition of the AV elements – check the AV elements at regular intervals.

## 2.12 Symbols on Deflectors

An **arrow** on the deflector shows the correct direction of rotation of the cutting attachments.

Some of the following symbols are applied to the outside of the deflector to indicate the approved combination of cutting attachment and deflector.



Deflector may be used with mowing heads.



Deflector may be used with grass cutting blades.



Deflector may be used with brush knives.



Deflector may be used with shredder blades.



Deflector must not be used with mowing heads.



Deflector must not be used with grass cutting blades.



Deflector must not be used with brush knives.



Deflector must not be used with shredder blades.




Deflector must not be used with circular saw blades.

## 2.13 Harness

The harness is included with the machine or available as a special accessory.



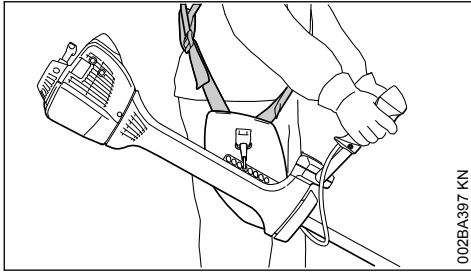


002BA397 KN

- ▶ Use the harness.
- ▶ With the engine running, attach the machine to the harness.

All cutting attachments must be used in combination with a full harness with a quick-release system.


### 2.14 Mowing Head with Nylon Line

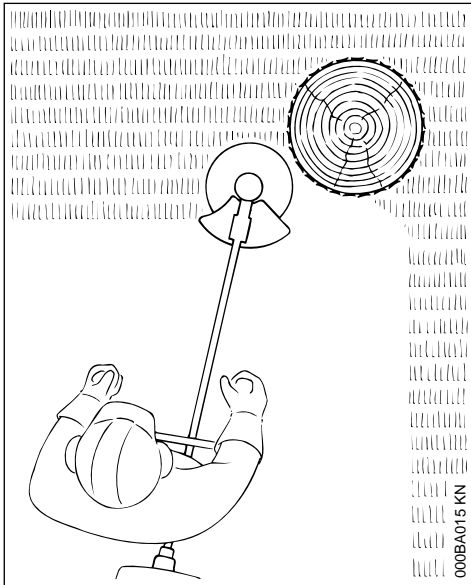

000BA015 KN

Nylon line achieves a soft cut for edging and trimming around trees, fence posts, etc. – less risk of damaging tree bark.

 
The mowing head comes with an instruction leaflet. Refill the mowing head as described in the instruction leaflet.



To reduce the risk of serious injury, never use wire or metal-reinforced line in place of the nylon line.

### 2.15 STIHL DuroCut

Check the wear limit marks!

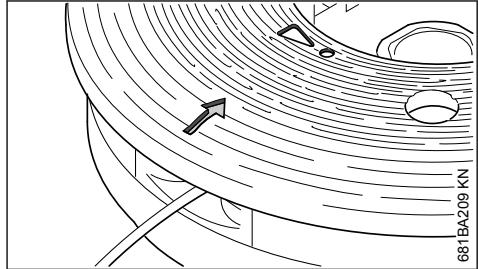

681BA209 KN

If one of the wear limit marks imbedded in the baseplate of the DuroCut (**exclamation marks**) becomes visible, do not continue using the mowing head since it may otherwise be damaged.

Replace the worn baseplate.

The mowing head comes with instruction leaflets. Equip the mowing head only with nylon line as described in the instruction leaflets.




Never use wire in place of the nylon mowing line – risk of injury.

### 2.16 STIHL Polycut Mowing Head with Polymer Blades

For mowing unobstructed edges of meadows (without posts, fences, trees or similar obstacles).

Check the wear limit marks!

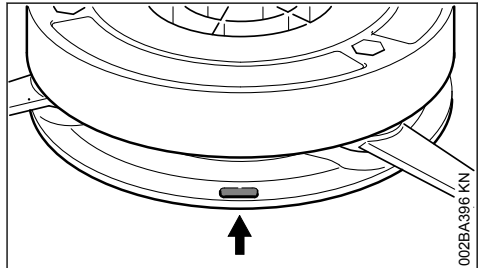

002BA396 KN

If one of the wear limit marks on the PolyCut mowing head is worn through (arrow): Do not continue using the mowing head. Install a new one. There is otherwise a **risk of injury** from thrown parts of the head.

It is important to follow the maintenance instructions for the PolyCut mowing head.

The PolyCut can also be equipped with mowing line in place of the polymer blades.

The mowing head comes with instruction leaflets. Equip the mowing head with polymers blades or nylon line as described in the instruction leaflets.

### WARNING


Never use wire in place of the nylon mowing line – **risk of injury**.

## 2.17 Risk of Kickout (Blade Thrust) with Metal Cutting Attachments

### WARNING




When using metal cutting attachments there is a risk of kickout when the rotating blade comes into contact with a solid object such as a tree trunk, branch, tree stump, rock or similar. The machine is thrown to the right or to the rear – opposite to the attachment's direction of rotation.

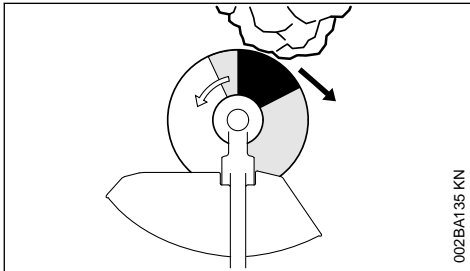

002BA135 KN

The **risk of kickout is greatest** when the **black area** of the rotating cutting attachment comes into contact with a solid object.

## 2.18 Grass Cutting Blade

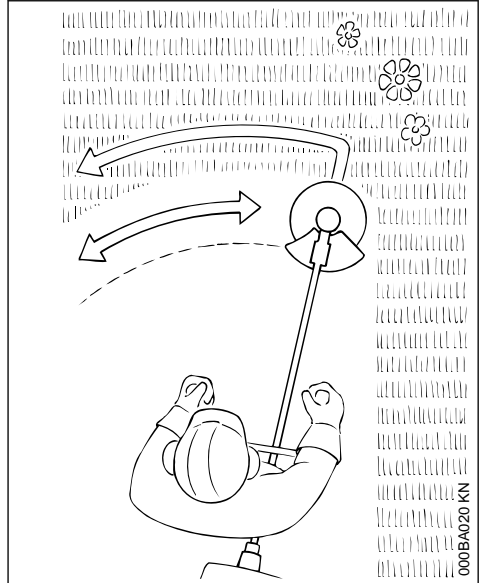

000BA020 KN

Use for grass and weeds only – sweep the brushcutter in an arc like a scythe.


### WARNING

Improper use may damage the grass cutting blade – **risk of injury** from thrown parts.

Resharpener the grass cutting blade according to instructions when it has dulled noticeably.


## 2.19 Brush Knife

For cutting matted grass, wild growth and scrub and thinning young stands with a stem diameter of no more than 2 cm – do not cut thicker stems – **risk of accidents**.

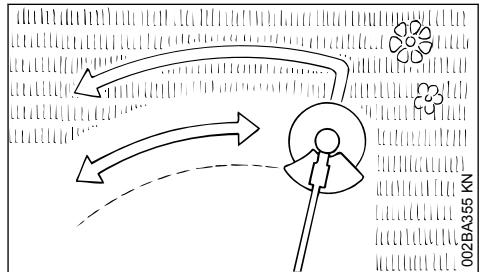

002BA355 KN

Use the brushcutter like a scythe (sweep it to the right and left) at ground level when cutting grass and thinning young stands.

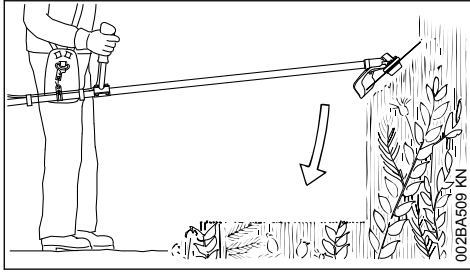

To cut wild growth and scrub, lower the brush knife down onto the growth to achieve a shredding effect – always keep the cutting attachment below hip level during this process.

Exercise extreme caution when using this method of cutting. The higher the cutting attachment is off the ground, the greater the risk of injury from cuttings being thrown sideways.


Warning! Improper use of a brush knife may cause it to crack, chip or shatter – **risk of injury** from thrown parts.

To reduce the risk of injury it is essential to take the following precautions:

- Avoid contact with stones, rocks, pieces of metal and other solid foreign objects.
- Never cut wood or shrubs with a stem diameter of more than 2 cm – use a circular saw blade for such work.
- Inspect the brush knife at regular short intervals for signs of damage. Do not continue working with a damaged brush knife.
- Resharpener the brush knife regularly and whenever it has dulled noticeably, and have it balanced if necessary (STIHL recommends a STIHL servicing dealer).

## 2.20 Shredder Blade

Suitable for thinning and shredding tough, matted grass and scrub.

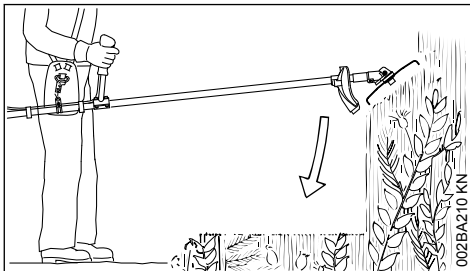

To cut wild growth and scrub, lower the shredder blade down onto the growth to achieve a shredding effect – always keep the cutting attachment below hip level during this process.

Exercise extreme caution when using this method of cutting. The higher the cutting attachment is off the ground, the greater the risk of injury from cuttings being thrown sideways.

Warning! Improper use may damage the shredder blade – **risk of injury** from thrown parts.

To reduce the risk of injury it is essential to take the following precautions:


- Avoid contact with stones, rocks, pieces of metal and other solid foreign objects.
- Never cut wood or shrubs with a stem diameter of more than 2 cm – use a circular saw blade for such work.
- Inspect the shredder blade at regular short intervals for signs of damage. Do not continue working with a damaged shredder blade.
- Resharpener the shredder blade regularly and whenever it has dulled noticeably, and have it balanced if necessary (STIHL recommends a STIHL servicing dealer).

## 2.21 Circular Saw Blade

 Suitable for cutting shrubs and trees with a maximum stem diameter of 7 cm.

Before starting the cut, accelerate the engine up to full throttle. Perform cut with uniform pressure.


Use circular saw blades only with a matching limit stop of the correct diameter.



To reduce the risk of blade damage, avoid contact with stones and the ground. Resharpener the blade properly in good time – dull teeth may result in the blade cracking and shattering and causing serious injury.

When felling, maintain a distance of at least two tree lengths from the next felling site.

2.21.1 Risk of kickout

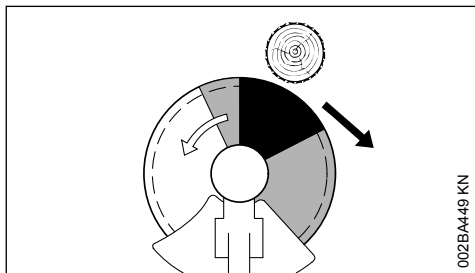

002BA449 KN

The risk of kickout is highest in the black area of the blade: Do not use this area of the circular saw blade for cutting.

There is also a risk of kickout when using the lighter shaded areas of the blade: These areas of the blade should only be used by experienced operators with specialized training.

STIHL recommends that you use the non-shaded area of the circular saw blade. Always start the cut with this area of the blade.

### 3 Approved Combinations of Cutting Attachment, Deflector, Limit Stop and Harness

Cutting attachment

Deflector, limit stop

Carrying strap


0006-GXX-0373-A0

### 3.1 Permissible combinations

Choose the correct combination from the table depending on the cutting tool!

## ! WARNING

For safety reasons only the cutting attachments and deflectors and/or limit stops within one line of the table may be combined with one another. No other combinations are permitted because of the **risk of accidents!**

## 3.2 Cutting attachments

### 3.2.1 Mowing heads

- 1 STIHL SuperCut 40-2
- 2 STIHL AutoCut 40-2
- 3 STIHL AutoCut 46-2
- 4 STIHL TrimCut 41-2
- 5 STIHL DuroCut 40-4
- 6 STIHL PolyCut 41-3

### 3.2.2 Metal cutting tools

- 7 Grass cutting blade 230-4 (Ø 230 mm)
- 8 Grass cutting blade 250-32 (Ø 250 mm)
- 9 Grass cutting blade 250-40 Spezial (Ø 250 mm)
- 10 Grass cutting blade 250-44<sup>1)</sup> (Ø 250 mm)
- 11 Grass cutting blade 255-8 (Ø 255 mm)
- 12 Brush knife 305-2 Spezial (Ø 305 mm)
- 13 Brush knife, 300-3 (Ø 300 mm)
- 14 Shredder blade 270-2 (Ø 270 mm)
- 15 Circular saw blade 200 scratcher tooth (Ø 200 mm)
- 16 Circular saw blade 200-22 chisel tooth (4119), circular saw blade 200-22 HP chisel tooth (4000)
- 17 Circular saw blade 225 scratcher tooth (Ø 225 mm)
- 18 Circular saw blade 225 chisel tooth (Ø 225 mm)
- 19 Carbide tipped circular saw blade 225 (Ø 225 mm)

## ! WARNING

Non-metal grass cutting blades, brush knives, shredder blades and circular saw blades are not permitted.

## 3.3 Guards, limit stops


- 20 Guard for mowing heads
- 21 Guard for metal cutting tools, items 7 to 13
- 22 Guard for shredder blades
- 23 Limit stop for circular saw blades, items 15, 16
- 24 Limit stop for circular saw blades, items 17 to 19

## 3.4 Carrying strap

- 25 Full harness must be used


## 4 Mounting the Bike Handle

### 4.1 Mounting Bike Handle with Swiveling Handle Support

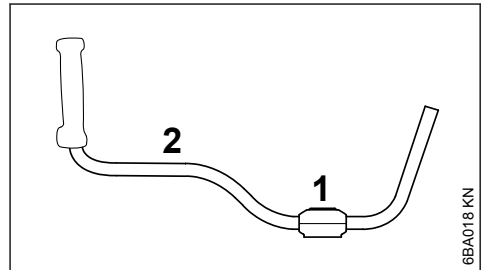


The machine is supplied with the clamp moldings (1) mounted to the handlebar (2).

### 4.2 Mounting the Control Handle

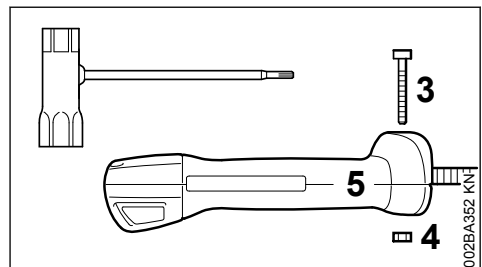


<sup>1)</sup> Approved for FS 260 and FS 360 only

- ▶ Take out the screw (3) and remove the nut (4) from the control handle (5).

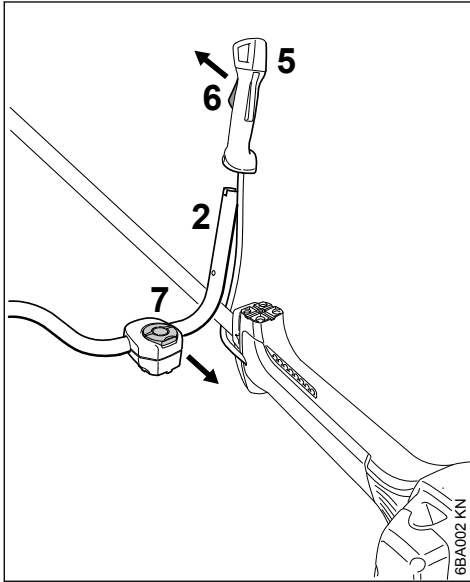


- ▶ Line up control handle (5) in relation to handlebar (2): Throttle trigger (6) must point toward the gearbox and the clamp screw (7) toward the engine.

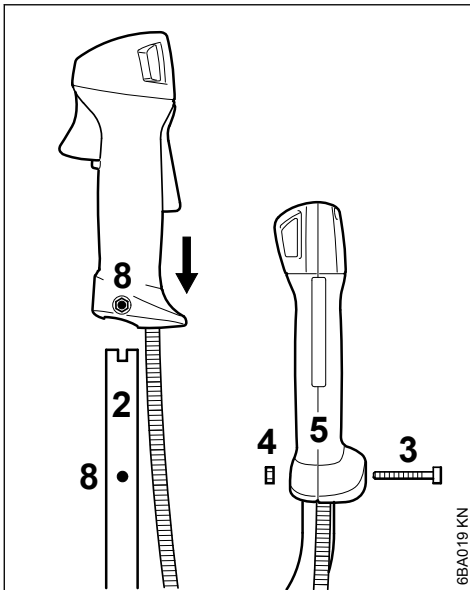


- ▶ Holding the control handle (5) in that position, push it on to the end of the handlebar (2) and line up the holes (8).
- ▶ Fit the nut (4) in the control handle (5), insert the screw (3) and tighten it down firmly.

### 4.3 Assembling the Handle Support


To assemble the swiveling handle support it is necessary to fit a spring in the clamps and secure them to the handle support on the machine.

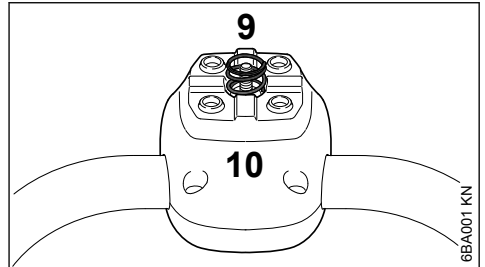


- ▶ Use the spring (9) from the parts kit supplied with the machine.
- ▶ Place the spring (9) in the lower clamp molding (10).

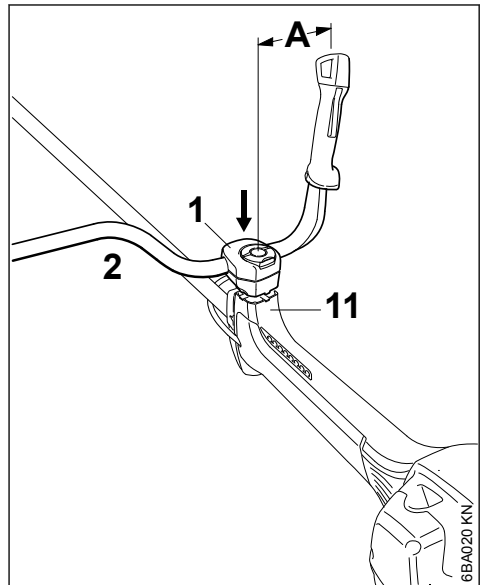


- ▶ Position the clamp moldings (1) with handlebar (2) on the handle support (11).

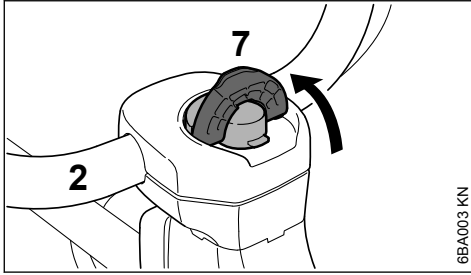

- ▶ Raise the grip of the wing screw (7) to the upright position.
- ▶ Turn the wing screw counterclockwise as far as stop.
- ▶ Push the wing screw into the handle support as far as stop and then screw it down – but do not finally tighten yet.
- ▶ Adjust the handlebar (2) so that distance A is no more than 15 cm.
- ▶ Line up the handlebar at a right angle to the drive tube.

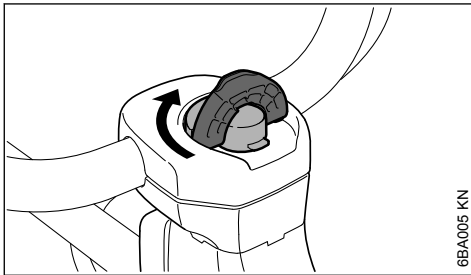

- ▶ Turn the wing screw clockwise as far as stop.

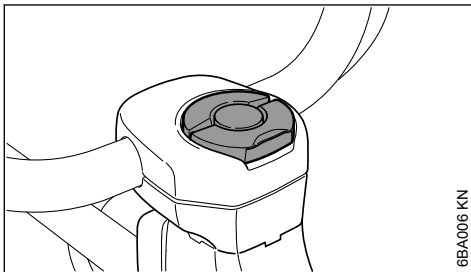


- ▶ Fold the grip of the wing screw down so that it is flush.

#### 4.4 FS 260: Fitting the throttle cable

##### NOTICE


Do not kink the throttle cable or lay it in tight radii – make sure the throttle trigger moves freely.

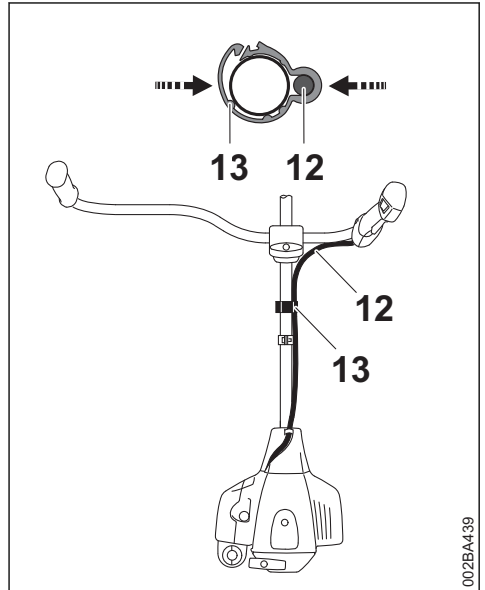


- ▶ Position the clamp (13) and handle support (12) against the drive tube.
- ▶ Close the throttle cable retainer (13). The retainer (13) snaps into place.

#### 4.5 Adjusting the Handlebar


##### Opening the wing screw

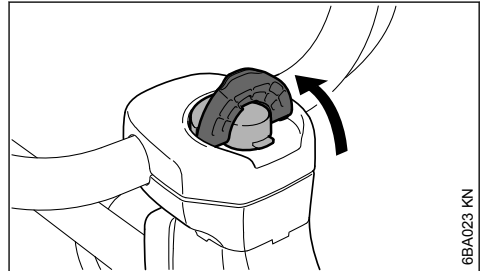

- ▶ Raise the grip of the wing screw to the upright position.

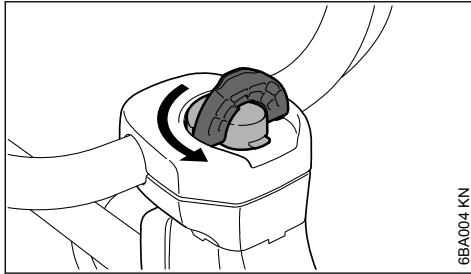


- ▶ Turn the wing screw counterclockwise until the handle support can be moved.

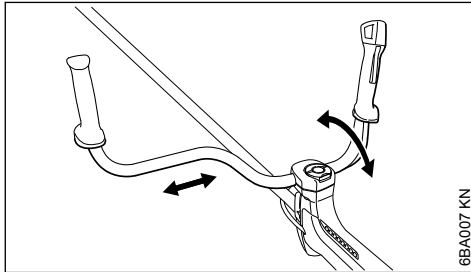


- ▶ Move the handlebar to the required position.

#### Closing the wing screw

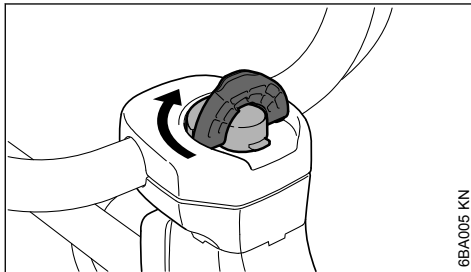


- ▶ Turn the wing screw clockwise as far as stop.

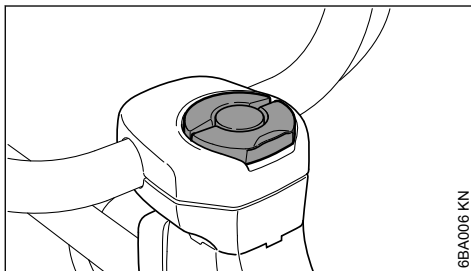

- ▶ Fold the grip of the wing screw down so that it is flush.

## 4.6 Swiveling the Handlebar

### Transport position

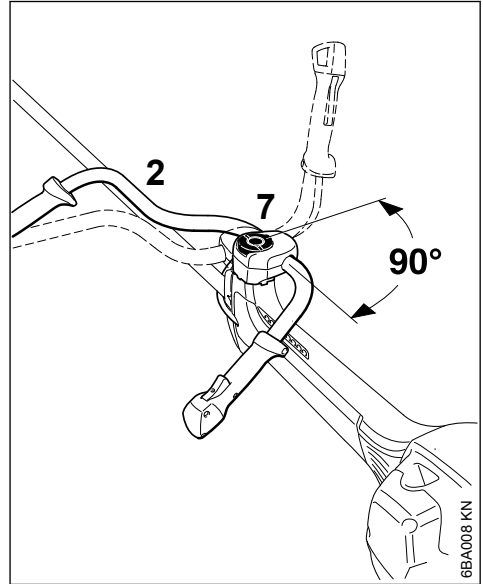

- ▶ Loosen the wing screw (7) and unscrew it until the handlebar (2) can be turned clockwise.
- ▶ Turn the handlebar 90° and then swing the handles down.
- ▶ Tighten down the wing screw (7) firmly.


### Working position

- ▶ Reverse the sequence described above to swing the handles up and turn the handlebar counterclockwise.



## 5 Fitting the Carrying Ring

### 5.1 Polymer Version

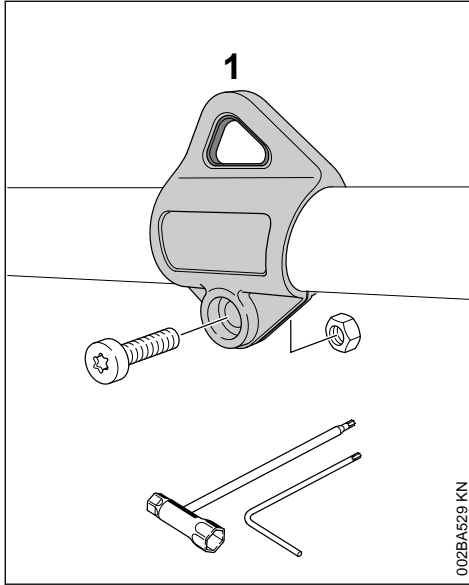


For position of carrying ring see "Main Parts".

- ▶ Push the carrying ring (1) over the drive tube.
- ▶ Insert the M5 nut in the hex recess in the carrying ring.
- ▶ Fit the M5x14 screw.
- ▶ Line up the carrying ring.
- ▶ Tighten down the screw firmly.

## 6 Adjusting the Throttle Cable

It may be necessary to correct the adjustment of the throttle cable after assembling the machine or after a prolonged period of operation.


Adjust the throttle cable only when the unit is completely and properly assembled.

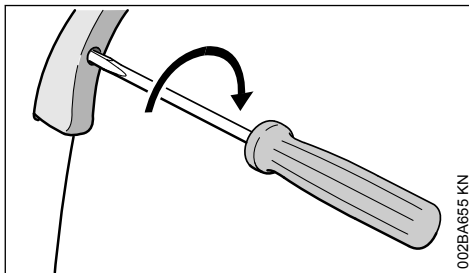


- ▶ Set the throttle trigger to the full throttle position.
- ▶ Carefully rotate the screw in the throttle trigger in the direction of the arrow until you feel initial resistance. Then rotate it another half turn in the same direction.

## 7 Mounting the Deflector

### 7.1 Use the Right Deflector

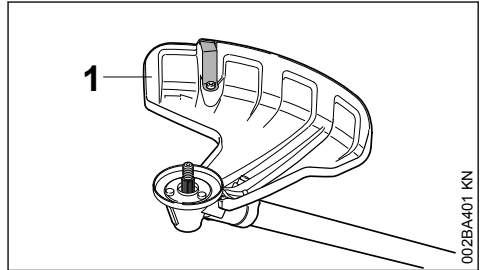


Deflector (1) is approved for mowing heads only and must therefore be mounted before fitting a mowing head.

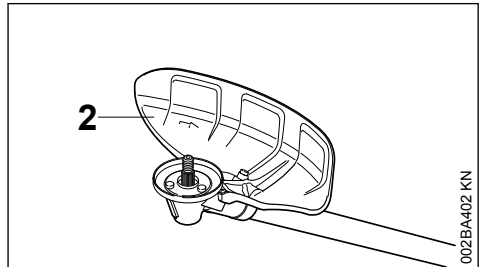


### ! WARNING

Deflector (2) is approved for grass cutting blades and brush knives only and must therefore be mounted before fitting a grass cutting blade or brush knife.

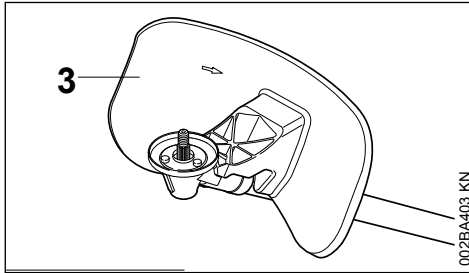

### ! WARNING

Deflector (3) is approved for shredder blades only and must therefore be mounted before fitting a shredder blade.

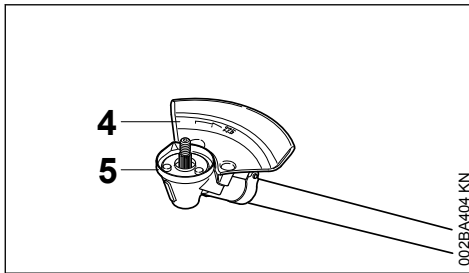


### ! WARNING

The limit stop (4) is approved as a deflector for circular saw blades only and must therefore be mounted before fitting a circular saw blade. It is also necessary to change the guard ring (5), see "Mounting the Cutting Attachment" / "Mounting Circular Saw Blades".

## 7.2 Mounting the Deflector


Deflectors (1 to 4) are mounted to the gearbox in the same way.

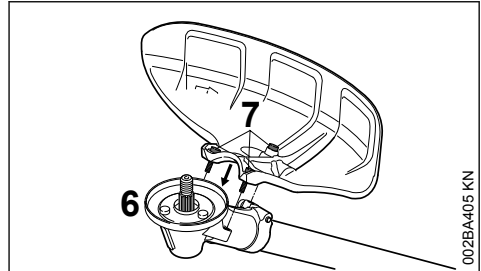

- ▶ Remove dirt from joints on gearbox and deflector – make sure that no dirt gets into the screw holes in the gearbox.
- ▶ Place the deflector on the gearbox (6).
- ▶ Insert the screws (7) and tighten them down firmly.

## 8 Mounting the Cutting Attachment

### 8.1 Placing power tool on the ground

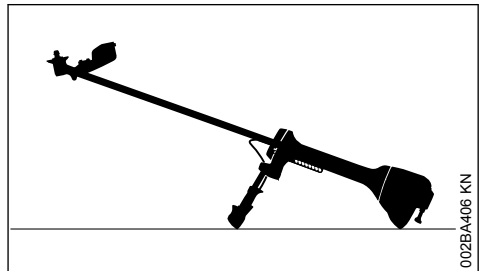

- ▶ Shut off the engine.
- ▶ Lay your power tool on its back so that the cutting attachment mounting face is pointing up.


### 8.2 Use the Right Guard Ring

Your power tool comes standard with a guard ring.

The guard ring is also available as a special accessory.

The guard ring must be mounted with particular care. Have this work performed by your servicing dealer. STIHL recommends a STIHL servicing dealer.

**Guard ring for mowing applications**

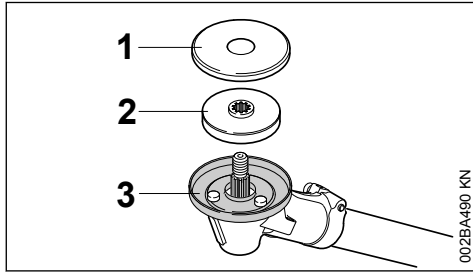


Always fit guard ring (1) when using

- mowing heads
- grass cutting blades
- brush knives
- shredder blades


to ensure optimum protection against grass cuttings.

**Guard ring for sawing applications**

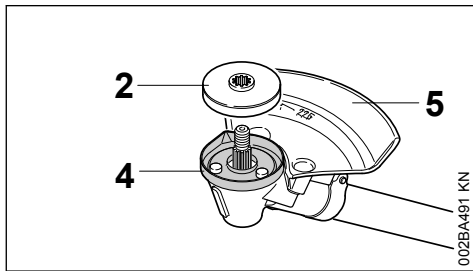

Fit guard ring (4) only when you use circular saw blades.

**8.3 Mounting the Thrust Plate and Guard Washer**

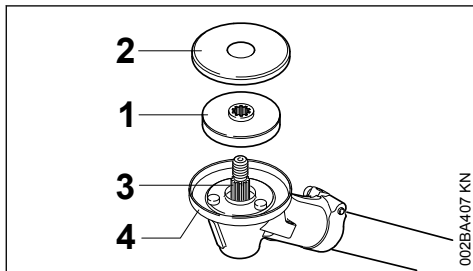

► Fit the thrust plate (1) and guard washer (2) on the shaft (3).

*NOTICE*

The thrust plate (1) on the gearbox is necessary for mounting all cutting attachments.


*NOTICE*

The guard washer (2) is required for mounting

- mowing heads
- grass cutting blades
- brush knives
- shredder blades

to the gearbox. The guard washer is not required for mounting circular saw blades.

**8.4 Checking the Thrust Plate**

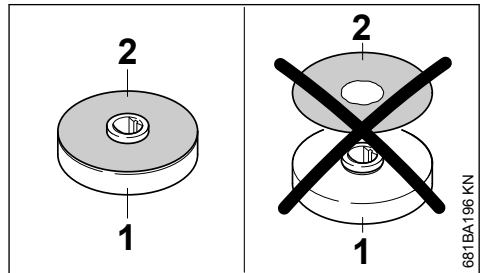


The thrust plate consists of the thrust plate body (1) to which a captive guard washer (2) is fitted.

**! WARNING**

Never use a thrust plate without the guard washer. Always replace a thrust plate if the guard washer is missing.


**8.5 Cleaning Gearbox Mounting Hardware for Cutting Attachment**

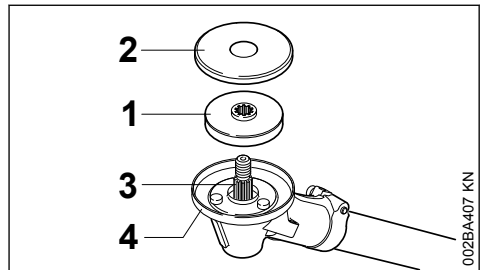

**NOTICE**

Check inside of guard ring (4) and area around it for dirt at regular intervals, or when you change the cutting attachment, and clean if necessary as follows:

- ▶ Pull the guard washer (1) and thrust plate (2) off the shaft.
- ▶ Thoroughly clean the guard ring, shaft, thrust plate and guard washer – do not remove the guard ring.

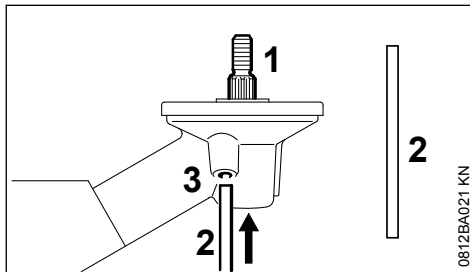**8.6 Blocking the Shaft**

The output shaft (1) must be blocked with the stop pin (2) to mount or remove cutting attachments. The stop pin is included with the machine and is available as a special accessory.


- ▶ Insert the stop pin (2) in the bore (3) in the gearbox as far as stop, apply slight pressure.
- ▶ Rotate shaft or cutting attachment until the stop pin slips into position and blocks the shaft.

**8.7 Mounting the Cutting Attachment****! WARNING**

Use a deflector that matches the cutting attachment – see "Mounting the Deflector".

**8.8 Fitting the mowing head with screw mounting**

Keep the supplement sheet for the mowing head in a safe place.

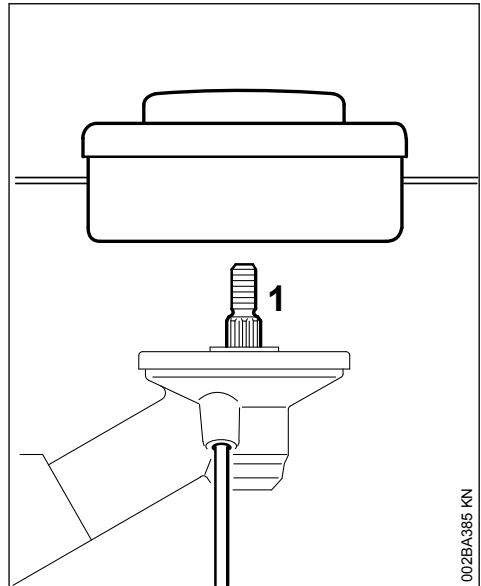

- ▶ Fit the thrust plate
- ▶ Turn the mowing head anticlockwise on the shaft (1) as far as it will go
- ▶ Retain the shaft
- ▶ Tighten the mowing head

**NOTICE**

Remove the tool that was used to block the shaft.

**8.9 Removing the Mowing Head**

- ▶ Retain the shaft
- ▶ Turn the mowing head clockwise

**8.10 Removing and Installing Metal Cutting Attachments**

Keep the leaflet and packaging of the metal cutting attachment in a safe place.

**! WARNING**

Wear protective gloves to reduce the risk of direct contact with the sharp cutting edges.


Mount only one metal cutting attachment.

**8.11 Mounting Grass Cutting Blades, Brush Knife**

Notice on new machines that come standard with a mowing head only: A "metal mowing attach-

ment mounting kit" is required to mount a grass cutting blade or brush knife. Kits are available from your servicing dealer.


### Check direction of rotation of cutting attachment

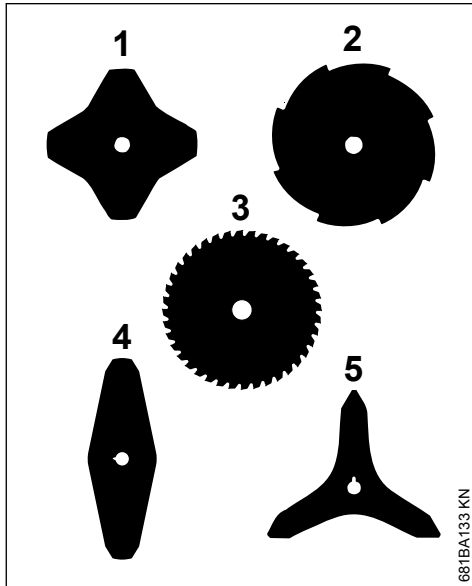

Cutting attachments 1, 4 and 5 may be mounted either way round – they must be turned over regularly to help avoid one-sided wear.

The cutting edges of cutting attachments 2 and 3 must point clockwise.

- ▶ Use guard ring for mowing attachments.

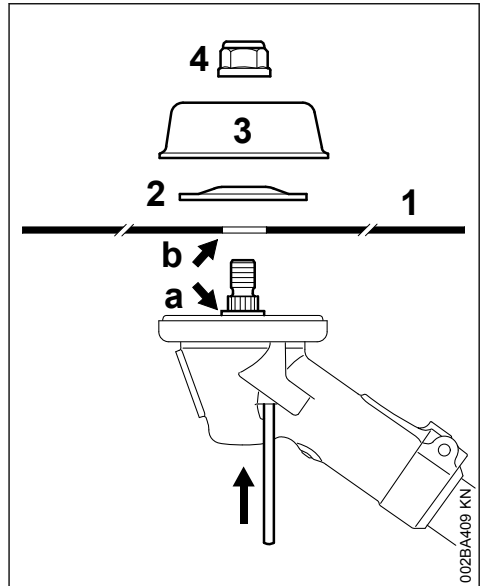

- ▶ Place the cutting attachment (1) in position.

**! WARNING**

Collar (a) must locate in the cutting attachment's mounting hole (b).

### Securing the cutting attachment

- ▶ Fit the thrust washer (2) – convex side must face up.
- ▶ Fit the rider plate (3).
- ▶ Block the shaft.
- ▶ Fit the nut (4) counterclockwise and tighten it down firmly.

**! WARNING**

If the mounting nut has become too loose, fit a new one.

**NOTICE**

Remove the tool used to block the shaft.


### 8.11.1 Removing the cutting attachment

- ▶ Block the shaft.
- ▶ Unscrew the mounting nut clockwise.
- ▶ Pull the cutting attachment with its mounting hardware off the gearbox.

## 8.12 Mounting Shredder Blade 270-2

Notice on new machines that come standard with a mowing head only: In addition to the "shredder blade mounting kit", a "shredder blade retrofit kit" is required to mount a shredder blade. Kits are available from your servicing dealer.

- ▶ Use guard ring for mowing attachments.

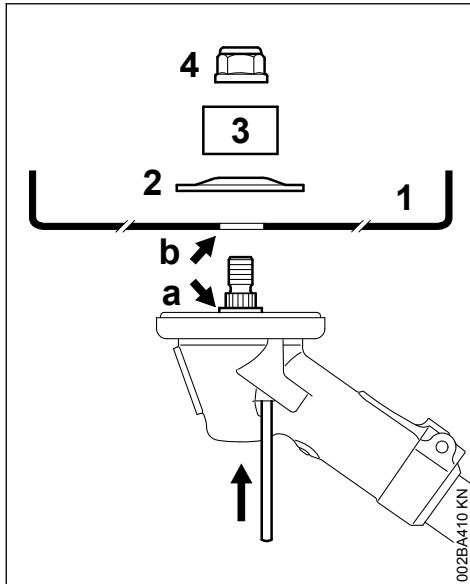

- ▶ Place the shredder blade (1) in position – the cutting edges must point upwards.

**! WARNING**

Collar (a) must locate in the cutting attachment's mounting hole (b).

### Securing the cutting attachment

- ▶ Fit the thrust washer (2) – convex side must face up.
- ▶ Fit the shredder blade guard ring (3) – opening must face up.
- ▶ Block the shaft.
- ▶ Fit the nut (4) counterclockwise and tighten it down firmly.

**! WARNING**

If the mounting nut has become too loose, fit a new one.

**NOTICE**

Remove the tool used to block the shaft.

### 8.12.1 Removing the cutting attachment

- ▶ Block the shaft.
- ▶ Unscrew the mounting nut clockwise.
- ▶ Pull the cutting attachment with its mounting hardware off the gearbox.


## 8.13 Mounting Circular Saw Blades

A limit stop kit, which includes a limit stop and a guard ring for circular saw blades, is available as a special accessory for mounting circular saw blades.


Notice on new machines that come standard with a mowing head only: Further mounting hardware is necessary for a circular saw blade. It is available from your servicing dealer.

### Change the guard ring.

Recommendation: The guard ring must be mounted with particular care. Have this work performed by your servicing dealer. STIHL recommends a STIHL servicing dealer.

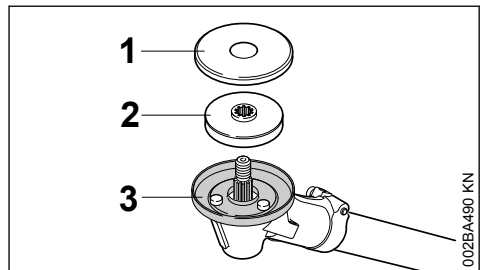


- ▶ Remove the guard washer (1) and thrust plate (2).
- ▶ Remove the guard ring (3) for mowing attachments.
- ▶ Keep the guard washer and guard ring in a safe place for future use.

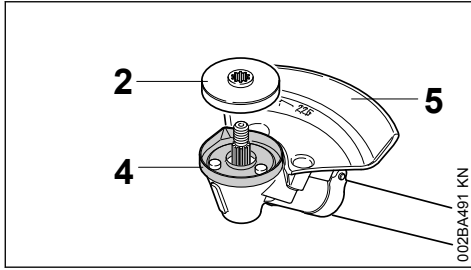


- ▶ Fit the guard ring (4) for saw blades.
- ▶ Slip the thrust plate (2) over the shaft.
- ▶ Fit the limit stop (5) for circular saw blades.

**NOTICE**

Do not use the guard washer (1) with circular saw blades.

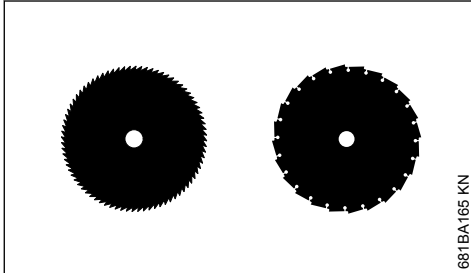**Check direction of rotation of cutting attachment**

Cutting edges of circular saw blades must point clockwise.

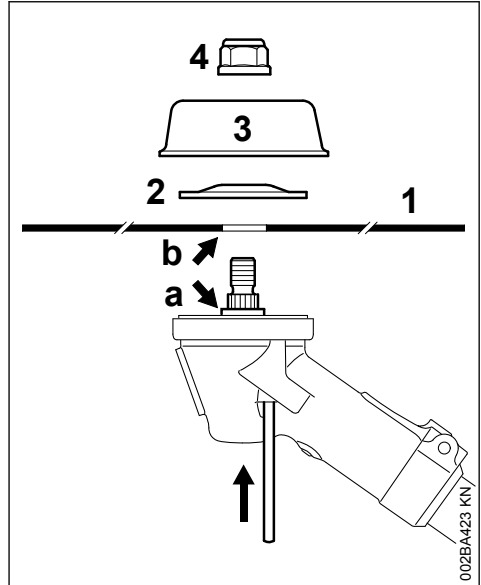

- ▶ Place the cutting attachment (1) in position.

**! WARNING**

Collar (a) must locate in the cutting attachment's mounting hole (b).

**Securing the cutting attachment**

- ▶ Fit the thrust washer (2) – convex side must face up.
- ▶ Fit the rider plate (3).

A rider plate (3) for sawing applications is available as a special accessory. It allows the full depth of cut of the saw blade to be used.

- ▶ Block the shaft.
- ▶ Fit the nut (4) counterclockwise and tighten it down firmly.

**! WARNING**

If the mounting nut has become too loose, fit a new one.

**NOTICE**

Remove the tool used to block the shaft.

**8.13.1 Removing the cutting attachment**

- ▶ Block the shaft.
- ▶ Unscrew the mounting nut clockwise.
- ▶ Pull the cutting attachment with its mounting hardware off the gearbox.

## 9 Fuel

The engine requires a mixture of gasoline and engine oil.



### WARNING

Avoid direct skin contact with fuel and breathing in of gasoline fumes.

### 9.1 STIHL MotoMix

STIHL recommends using STIHL MotoMix. This pre-blended fuel is free of benzene and lead, is distinguished by a high octane rating, and always provides the proper mixing ratio.

STIHL MotoMix uses STIHL HP Ultra two-stroke engine oil for optimum engine life.

MotoMix is not available in all markets.

### 9.2 Mixing fuel

#### NOTICE

Unsuitable fuels or a mixing ratio that deviates from the specification can lead to severe engine damage. The engine, seals, fuel lines and fuel tank may be damaged if low-quality gasoline or engine oil is used.

#### 9.2.1 Gasoline

Use only **high-quality gasoline** with an octane rating of at least 90 ROC – leaded or unleaded.

Gasoline with an alcohol component exceeding 10% can cause impaired engine performance in engines with manually adjustable carburetors and thus should not be used in these engines.

Engines with M-Tronic deliver full engine performance using gasoline with an alcohol component of up to 27% (E27).

#### 9.2.2 Engine oil

If you mix the fuel yourself, use only STIHL two-stroke engine oil or another high-performance engine oil classified as JASO FB, JASO FC, JASO FD, ISO-L-EGB, ISO-L-EGC or ISO-L-EGD.

STIHL specifies STIHL HP Ultra two-stroke engine oil or an equivalent high-performance engine oil in order to maintain emission limits over the machine's service life.

#### 9.2.3 Mixing ratio

with STIHL two-stroke engine oil 1:50; 1:50 = 1 part oil + 50 parts gasoline

#### 9.2.4 Examples

Quantity of gas-line Liters	STIHL two-stroke engine oil 1:50 Liters (ml)
1	0.02 (20)
5	0.10 (100)
10	0.20 (200)
15	0.30 (300)
20	0.40 (400)
25	0.50 (500)

- ▶ Pour oil into an approved safety fuel canister first, then add gasoline and mix thoroughly

#### 9.3 Storing fuel mixture

Store in approved safety fuel canisters only in a dry, cool and secure place protected against light and sunlight.

**Fuel mixture deteriorates with age** – mix only as much as needed for a few weeks. Do not store fuel mixture for longer than 30 days. The fuel mixture can become unusable more quickly if exposed to light, sunlight or low or high temperatures.

STIHL MotoMix however can be stored for up to 5 years without any problems.

- ▶ Shake the canister containing the fuel mixture thoroughly before refueling



### WARNING

Pressure may have built up in the canister – open it carefully.


- ▶ The fuel tank and the canister in which fuel mixture is stored should be cleaned thoroughly from time to time

Residual fuel and the liquid used for cleaning must be disposed of in accordance with regulations and without harming the environment!



## 10 Fueling

### 10.1 Fuel Filler Cap

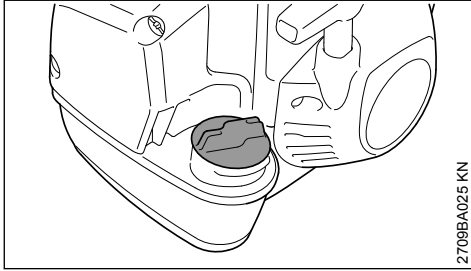

2709BA025 KN




#### WARNING

When fueling on a slope, always position the machine with the filler cap facing uphill.

- ▶ Place the machine on level ground so that the filler cap is facing up.
- ▶ Before fueling, clean the filler cap and the area around it to ensure that no dirt falls into the tank.

### 10.2 Opening the filler cap

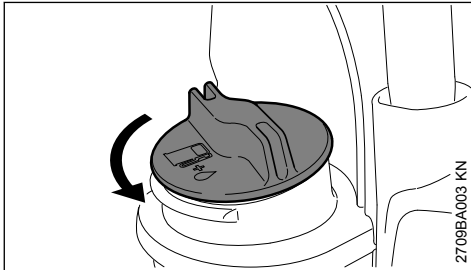

2709BA003 KN

- ▶ Turn the cap counterclockwise until it can be removed from the tank opening.
- ▶ Remove the cap.


### 10.3 Filling Up with Fuel

Take care not to spill fuel while fueling and do not overfill the tank.

STIHL recommends you use the STIHL filler nozzle for fuel (special accessory).

- ▶ Fill up with fuel.

### 10.4 Closing the filler cap

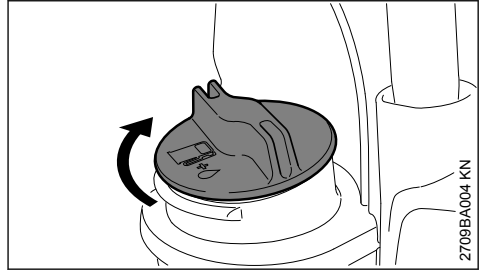

2709BA004 KN

- ▶ Place the cap in the opening.
- ▶ Turn the cap clockwise as far as stop and tighten it down as firmly as possible by hand.


## 11 Fitting the Full Harness

Fitting the full harness is described in detail in the instruction sheet supplied.

The type and style of the harness depend on the market.

### 11.1 FS 260


#### 11.1.1 Putting on the harness

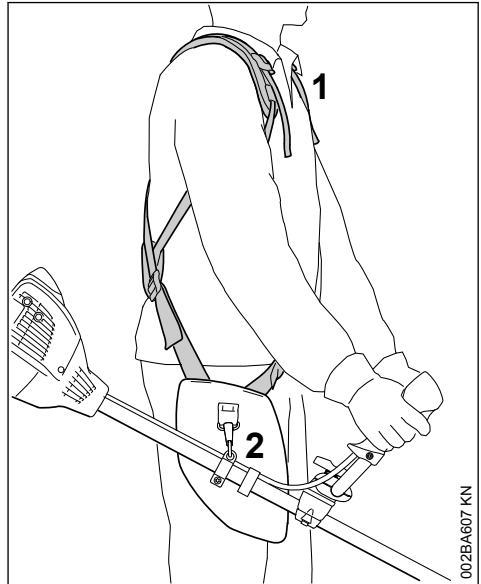

002BA607 KN

- ▶ Put on the full harness (1).
- ▶ Adjust the length of the strap so that the carabiner (2) is about a hand's width below your right hip.


### 11.1.2 Attaching machine to harness

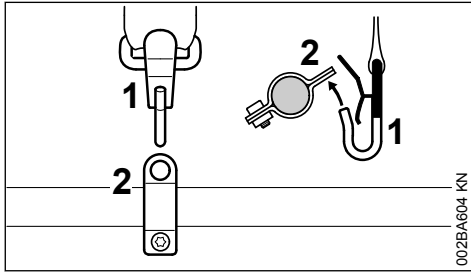

002BA604 KN

- ▶ Attach the carabiner (1) to the carrying ring (2) on the shaft.
- ▶ Balance the machine – see "Balancing the Machine".

### 11.1.3 Disconnecting machine from harness

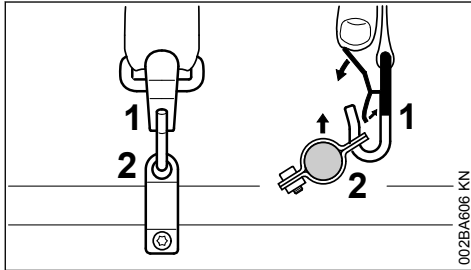


002BA606 KN

- ▶ Press down the bar on the carabiner (1) and pull the carrying ring (2) out of the carabiner.

## 11.2 FS 360


### 11.2.1 Putting on the harness

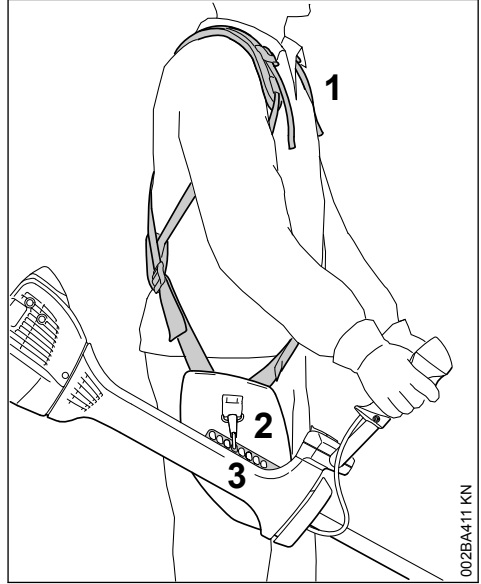

002BA411 KN

- ▶ Put on the full harness (1).
- ▶ Adjust the length of the strap so that the carabiner (2) is about a hand's width below your right hip.
- ▶ Attach the spring hook to the machine's perforated rail (3).
- ▶ Find the right attachment point for the cutting attachment you are using – see "Balancing the Machine".


### 11.2.2 Attaching machine to harness

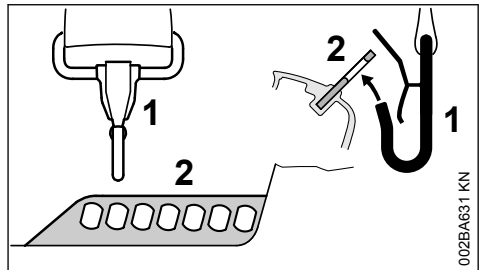

002BA631 KN

- ▶ Attach the carabiner (1) to the perforated rail (2) on the drive tube.

### 11.2.3 Disconnecting machine from harness

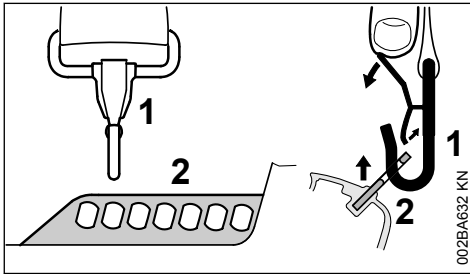

- ▶ Press down the bar on the carabiner (1) and pull the perforated rail (2) out of the carabiner.

### 11.3 Throwing Off the Machine



**WARNING**


The machine must be quickly thrown off in the event of imminent danger. To throw off the machine, use the procedure described under "Detaching Machine from Harness". Practice removing and putting down the machine as you would in an emergency. To avoid damage, do not throw the power tool to the ground when practicing.

Practice slipping the harness off your shoulders.

## 12 Balancing the Machine

### 12.1 FS 260


#### 12.1.1 Balanced positions

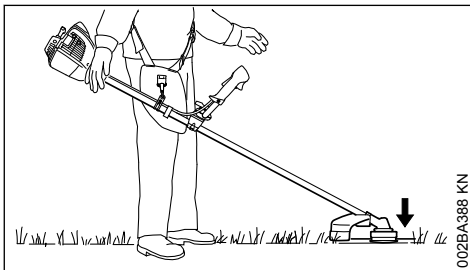

Mowing heads, grass cutting blades, brush knives, shredder blades and circular saw blades should lightly touch the ground.

The correct balanced position is obtained as follows:

### 12.1.2 Let the machine swing until it stops moving

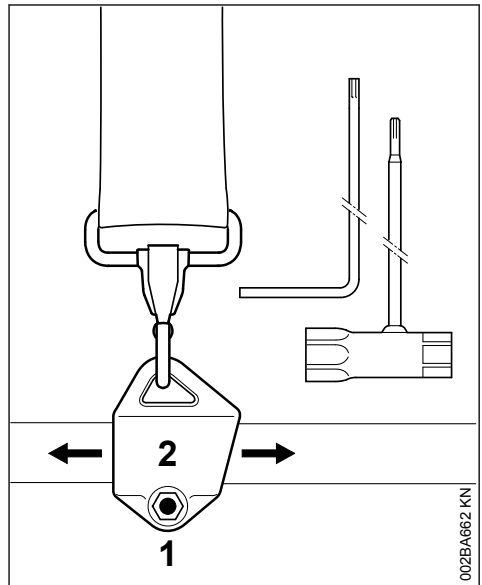

- ▶ Loosen the screw (1)
- ▶ Move the carrying ring (2) – lightly tighten the screw – let the machine swing until it stops moving – then check the balanced position

When the correct balanced position has been reached:


- ▶ Tighten the screw on the carrying ring

### 12.2 FS 360


The machine is balanced differently depending on the attached cutting tool.

- ▶ With the unit suspended from the harness, see how it is balanced and change attachment point as necessary:

#### 12.2.1 Balanced positions

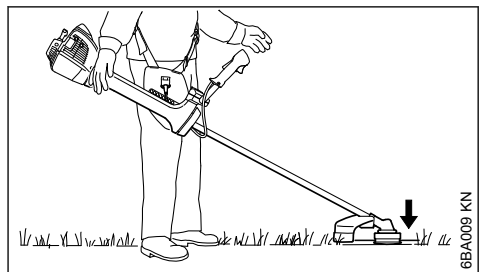


Mowing heads, grass cutting blades, brush knives and shredder blades should rest lightly on the ground.

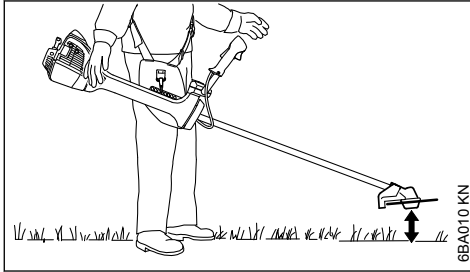

Circular saw blades should "hover" approx. 20 cm above the ground.

## 13 Starting / Stopping the Engine

### 13.1 Controls

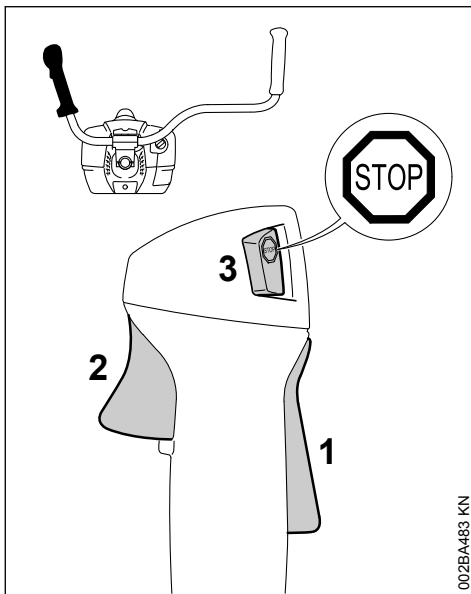


- 1 Throttle trigger lockout
- 2 Throttle trigger
- 3 Stop switch with Run and Stop positions.  
Depress the stop switch (⊖) to switch off the ignition.

### 13.1.1 Function of stop switch and ignition system


The stop switch is normally in the Run position, i.e. when it is **not** depressed: The ignition is switched on – the engine is ready to start. Operate the stop switch to switch off the ignition. The ignition is switched on again automatically after the engine stops.

### 13.2 Starting the Engine

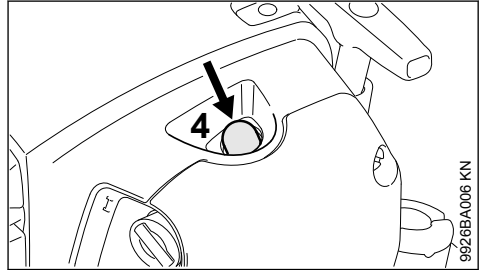

- ▶ Press the manual fuel pump bulb (4) at least five times – even if the bulb is filled with fuel.

#### 13.2.1 Cold engine (cold start)

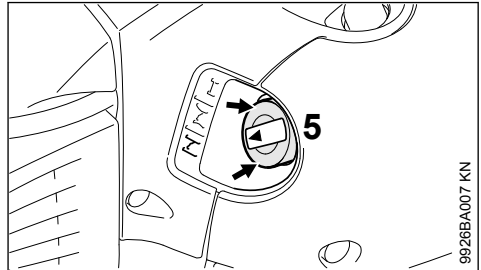



- ▶ Press in the rim (arrows) of the choke knob (5) and then turn it to **I**.

Also use this setting if the engine has been running but is still cold.


#### 13.2.2 Hot engine (hot start)

The engine has reached normal operating temperature, then shut down and restarted after more than 5 minutes.

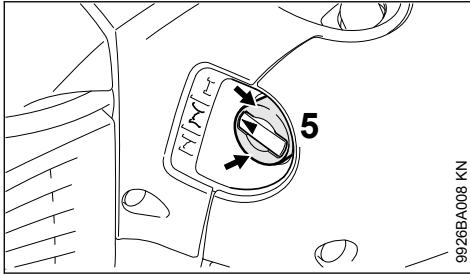

- ▶ Press in the outer edge (arrows) of the choke knob (5) and then turn it to .

### 13.2.3 Cranking

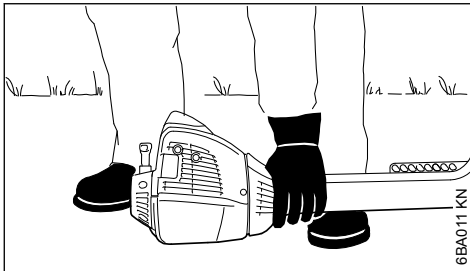


- ▶ Place the unit on the ground: It must rest securely on the engine's guard plate and the deflector.
- ▶ If fitted: Remove the transport guard from the cutting attachment.

**To reduce the risk of accidents**, check that the cutting attachment is not touching the ground of any other obstacles.

- ▶ Make sure you have a firm footing, either standing, stooping or kneeling.
- ▶ Hold the unit **firmly** on the ground with your left hand and press down – do not touch the throttle trigger or lockout lever – your thumb should be under the fan housing.

#### NOTICE


Do not stand or kneel on the drive tube.

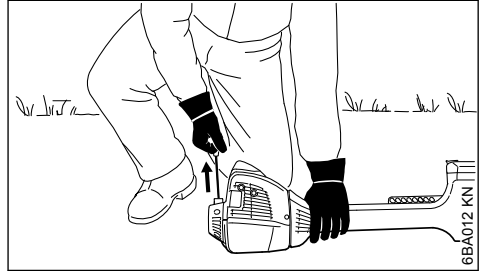

- ▶ Hold the starter grip with your right hand.

Alternative method of starting:

Engine warm and the machine hanging from the harness.

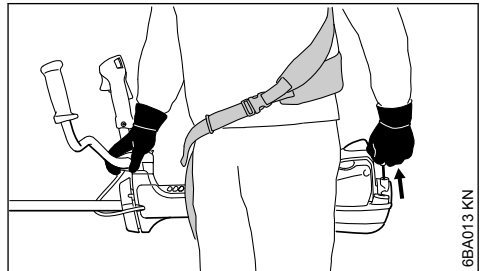

- ▶ Hold the machine firmly with your right hand on the drive tube, handle support or handle-bar.
- ▶ With the machine behind you, press it against the left side of your body.
- ▶ Hold the starter grip with your left hand.

Both methods:


- ▶ Pull the starter grip steadily.

#### NOTICE

Do not pull out the starter rope all the way – it **might otherwise break**.

- ▶ Do not let the starter grip snap back. Guide it slowly back into the housing so that the starter rope can rewind properly.
- ▶ Continue cranking until the engine runs.

### 13.2.4 As soon as the engine runs

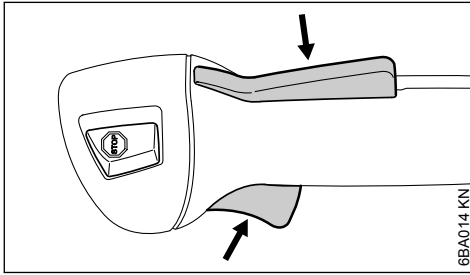

- ▶ Press down the throttle trigger lockout and open the throttle – the choke knob moves to the run position **I**. After a cold start, warm up the engine by opening the throttle several times.

#### **! WARNING**

Make sure the carburetor is correctly adjusted. The cutting attachment must not rotate when the engine is idling.

Your machine is now ready for operation.

### 13.3 Stopping the Engine

- ▶ Depress the momentary contact stop switch – the engine stops – release the stop switch – it springs back to the run position.

### 13.4 Other Hints on Starting

#### At very low outside temperatures

- ▶ Set the engine to winter operation if necessary, see "Winter Operation".
- ▶ If your machine is very cold (frost or ice on machine), start the engine and keep it at a high idle speed (cutting attachment rotates) until it reaches normal operating temperature.

#### Engine stalls in cold start position **I** or under acceleration

- ▶ Move the choke knob to **II** and continue cranking until the engine runs.

#### Engine does not start in hot start position **II**

- ▶ Move the choke knob to **I** and continue cranking until the engine runs.

#### If the engine does not start

- ▶ Check that all settings are correct.
- ▶ Check that there is fuel in the tank and refuel if necessary.
- ▶ Check that the spark plug boot is properly connected.
- ▶ Repeat the starting procedure.

#### Engine is flooded

- ▶ Move the choke knob to **I** and continue cranking until the engine runs.

### 13.5 Fuel tank run until completely dry

Recommendation: Carry out the following steps irrespective of the engine's operating condition before the tank was run dry.



- ▶ Turn the choke knob to **I**.
- ▶ Go to section on "Starting the Engine" and restart the engine as described for a cold engine.


## 14 Transporting the Unit

### 14.1 Using Transport Guard


The type of transport guard depends on the metal cutting attachment supplied with the machine. Transport guards are available as special accessories.

### 14.2 230 mm Grass Cutting Blades

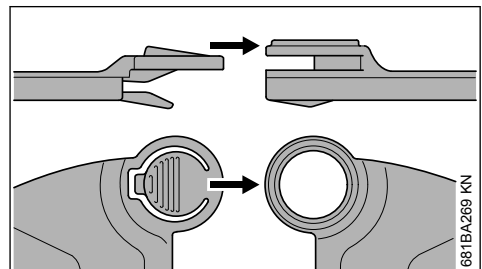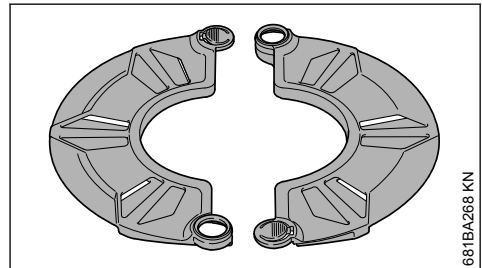

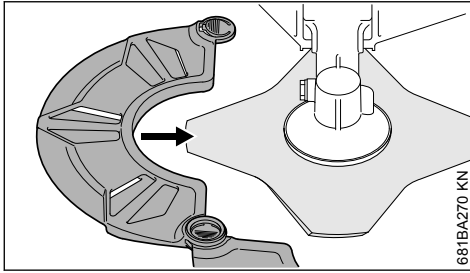


681BA270 KN

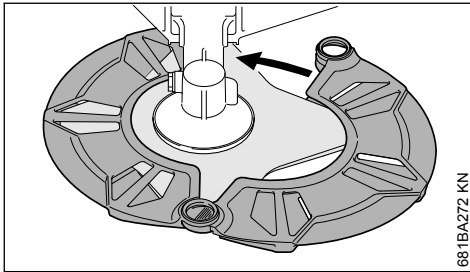


681BA272 KN

### 14.3 Grass Cutting Blades up to 260 mm

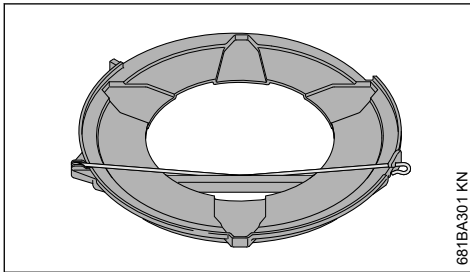


681BA301 KN

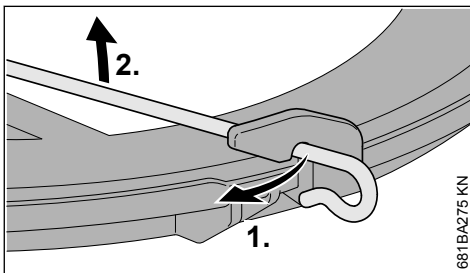


681BA275 KN

- ▶ Disconnect wire rod from the transport guard.
- ▶ Swing wire rod outwards.

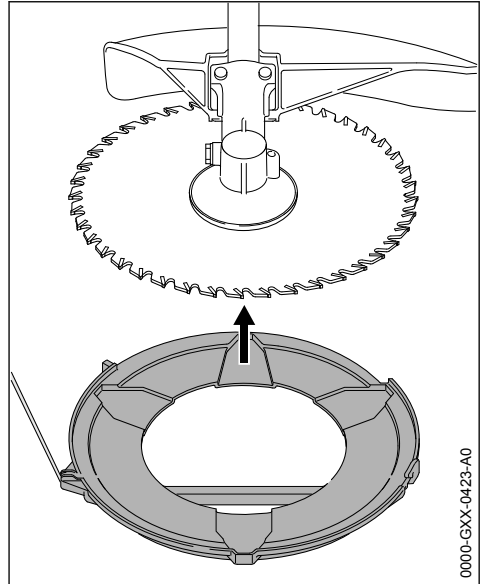

0000-GXX-0423-A0


- ▶ Fit the transport guard on the cutting attachment from below.

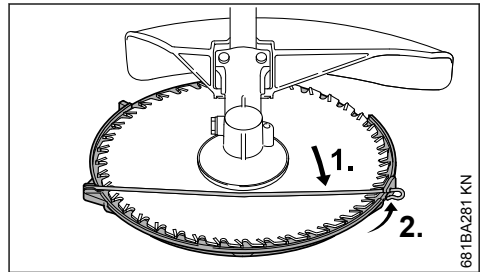


681BA281 KN

- ▶ Hook wire rod to the transport guard.
- ▶ Swing wire rod into position.


### 14.4 Circular Saw Blades

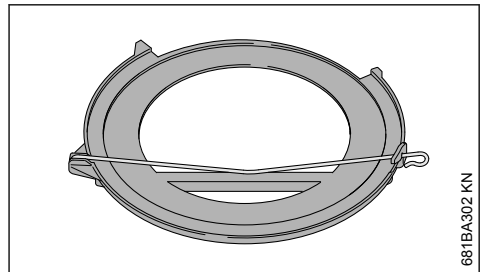


681BA302 KN

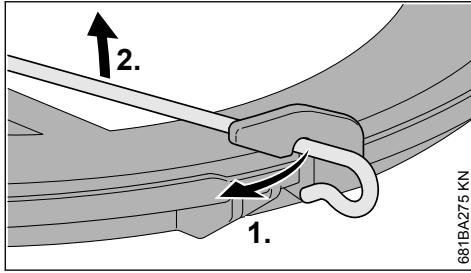

- ▶ Disconnect wire rod from the transport guard.


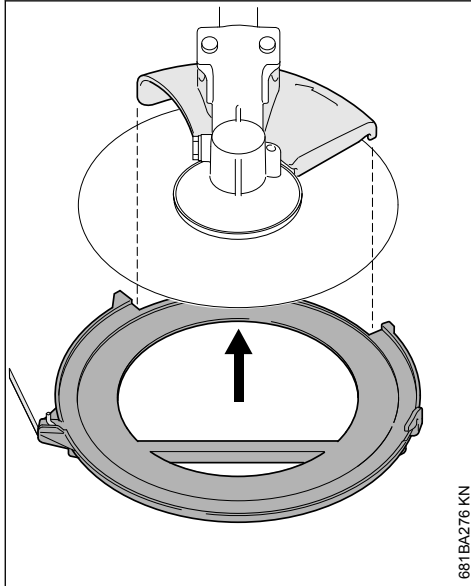


- ▶ Swing wire rod outwards.
- ▶ Fit transport guard on saw blade from below, making sure the limit stop is properly seated in the recess.

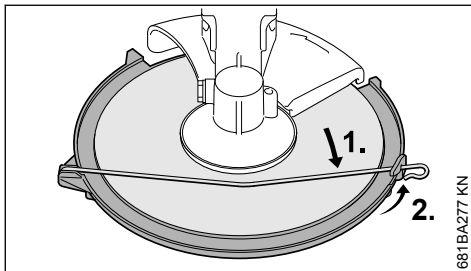


- ▶ Swing wire rod into position.
- ▶ Hook wire rod to the transport guard.

## 14.5 Universal Transport Guard

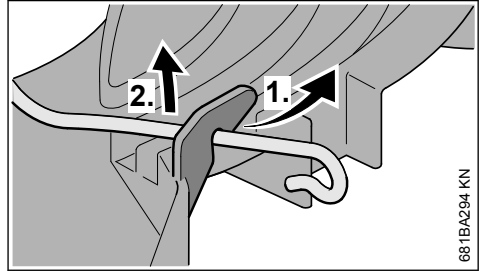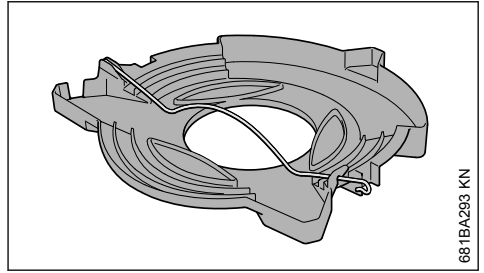

- ▶ Disconnect wire rod from the transport guard and swing it outwards.

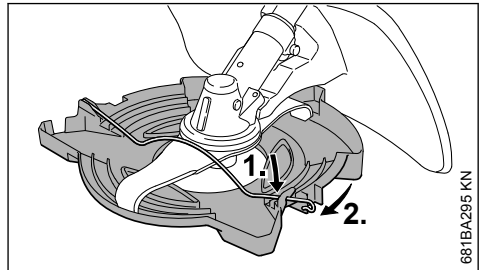

- ▶ Fit the transport guard on the cutting attachment from below.
- ▶ Attach wire rod to the hook on the transport guard.

## 15 Operating Instructions

### 15.1 During break-in period

A factory-new machine should not be run at high revs (full throttle off load) for the first three tank fillings. This avoids unnecessary high loads during the break-in period. As all moving parts have to bed in during the break-in period, the frictional resistances in the engine are greater during this period. The engine develops its maximum power after about 5 to 15 tank fillings.



## 15.2 During Operation

After a long period of full throttle operation, allow the engine to run for a short while at idle speed so that engine heat can be dissipated by the flow of cooling air. This protects engine-mounted components (ignition, carburetor) from thermal overload.

## 15.3 After Finishing Work

Storing for a short period: Wait for the engine to cool down. Empty the fuel tank and keep the machine in a dry place, well away from sources of ignition, until you need it again. For longer out-of-service periods – see "Storing the Machine".

# 16 Air filter

## 16.1 General Information

The filter has a very long service life.


Do not remove the filter cover or replace the air filter as long as there is no noticeable loss of power.

Dirty air filters reduce engine power, increase fuel consumption and make starting more difficult.


## 16.2 Replacing the Air Filter

Only if there is a noticeable loss of engine power

- ▶ Turn the choke knob to **I**.

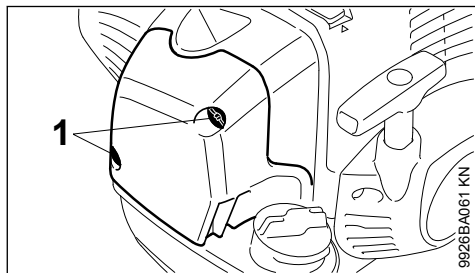

- ▶ Loosen the screws (1).

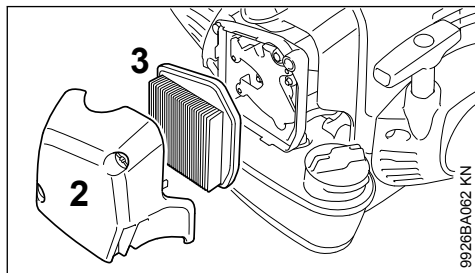

- ▶ Remove the filter cover (2).

- ▶ Clean away loose dirt from around the filter (3) and inside the filter cover.

The air filter (3) is a pleated paper filter element.

- ▶ Remove and check the filter element (3) – replace if paper or frame is dirty or damaged.
- ▶ Unpack the new filter.

### NOTICE

Do not bend or twist the filter before installation as it might otherwise be damaged – do not use damaged filters.

- ▶ Fit the filter in the filter housing.
- ▶ Fit the filter cover.


Use only high quality air filters to ensure the engine is protected from abrasive dust.

STIHL recommends you use only original STIHL air filters. The high quality standard of these parts guarantees trouble-free operation, a long engine life and very long filter service lives.

## 16.3 Filter Element for Winter Operation

Maintenance and care of the special filter element for winter operation are described in the chapter on "Winter Operation".

# 17 Adjusting the Carburetor

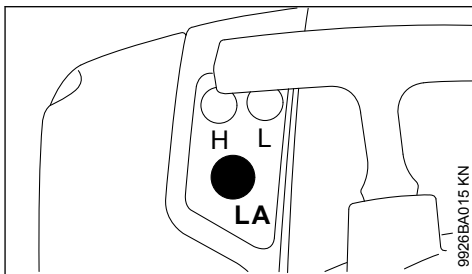

The carburetor has been set at the factory to provide an optimum fuel-air mixture under most operating conditions.

## 17.1 Adjusting idle speed

### Engine stops while idling

- ▶ Turn the idle speed screw (LA) slowly clockwise until the engine runs smoothly.

### Cutting tool rotates when engine is idling


- ▶ Turn the idle speed screw (LA) slowly counter-clockwise until the cutting attachment stops moving.

## 18 Winter Operation

### 18.1 At temperatures below +10°C

#### Preheating the carburetor


Repositioning a shutter allows heated air to be drawn in from around the cylinder and mixed with cold air – this helps prevent carburetor icing.

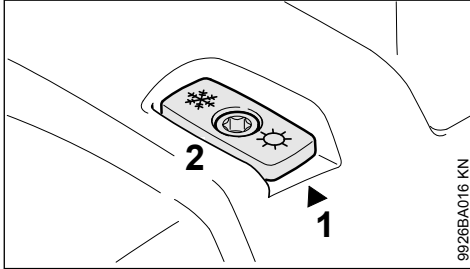

An arrow (1) on the shroud indicates the setting of the shutter (2) for summer or winter operation.

Meaning of symbols:

- "Sun" = summer operation
- "Snowflake" = winter operation

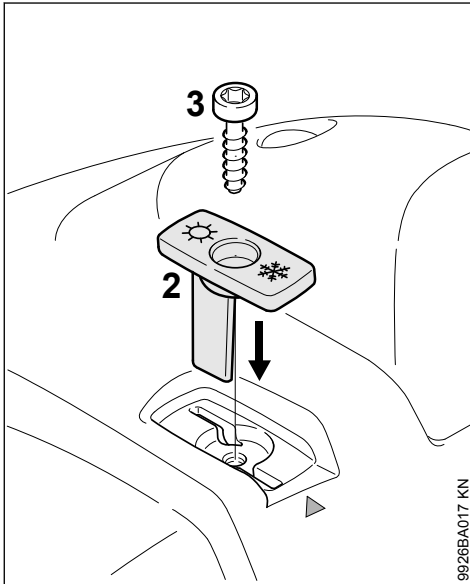


- ▶ Remove the screw (3) from the shutter.
- ▶ Pull the shutter (2) out of the shroud.
- ▶ Rotate the shutter (2) from the summer position to the winter position and refit it.
- ▶ Secure the shutter in position with the screw (3).

### 18.2 At temperatures between +10°C and +20°C

The machine can normally be operated in this temperature range with the shutter (2) in the summer position. Change the position of the shutter if necessary.

### 18.3 At temperatures above +20°C

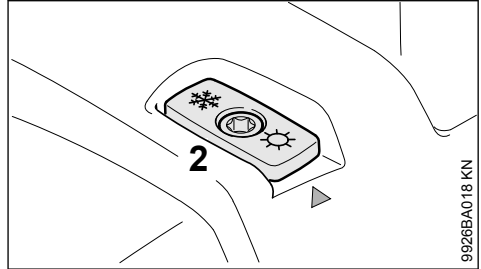

- ▶ Always return the shutter (2) to the summer position.

#### NOTICE

Do not operate the machine in the winter position at temperatures above +20°C because there is otherwise a risk of engine running problems and overheating.


### 18.4 At temperatures below –10°C

In extreme wintry conditions

- Temperatures below –10°C
- Powder or drifting snow

it is advisable to use the optional "cover plate kit".

Two different cover plate kits are available to suit the different tank caps.

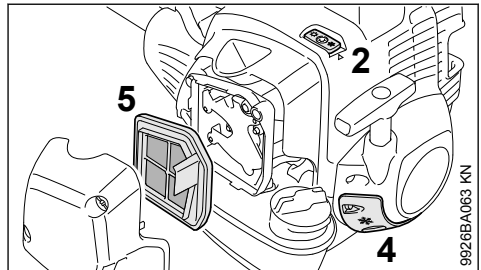

The cover plate kits contain the following parts for converting the power tool:

- 4 Cover plate partially blanks off the slots in the starter housing

5 Synthetic fabric filter element for the air filter

– Instructions for converting the machine

For machines with tank cap with hinged grip:

– O-ring for the tank filler cap

After installing the cover plate kit:

▶ Set the shutter (2) to the winter position.

**18.5 At temperatures above –10°C**

▶ Remove the parts of the cover plate kit and refit the standard parts for summer operation.

Note for machines with tank cap with hinged grip: The O-ring supplied with the cover plate kit can be left on the machine's tank cap.

Depending on the ambient temperature:

▶ Set the shutter (2) to the summer or winter position.

**18.6 Cleaning the Air Filters**

- ▶ Loosen filter cover mounting screws.
- ▶ Remove the filter cover.
- ▶ Clean away loose dirt from around the filter (5) and inside the filter cover.
- ▶ Knock the filter (5) out on the palm of your hand or blow it clear with compressed air from the inside outwards.

In case of stubborn dirt or sticky filter fabric:


▶ Wash the filter in a clean, non-flammable solution (e.g. warm soapy water) and then dry.

Always replace a damaged filter.


**19 Spark Plug**

- ▶ If the engine is down on power, difficult to start or runs poorly at idle speed, first check the spark plug.
- ▶ Fit a new spark plug after about 100 operating hours – or sooner if the electrodes are badly eroded. Install only suppressed spark plugs of the type approved by STIHL – see "Specifications".

**19.1 Removing the Spark Plug**

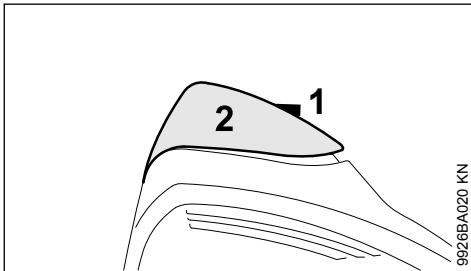


- ▶ Rotate the screw (1) in the cap (2) until the screw head projects from it.

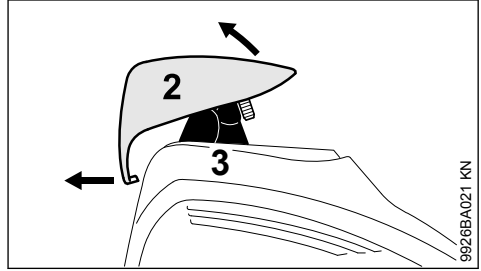

- ▶ Lift the front of the cap (2) and push it to the rear to disengage.
- ▶ Leave the cap to one side.
- ▶ Pull off the spark plug boot (3).
- ▶ Unscrew the spark plug.


**19.2 Checking the Spark Plug**

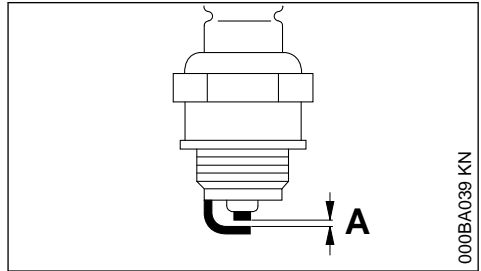

- ▶ Clean dirty spark plug.
- ▶ Check electrode gap (A) and readjust if necessary – see "Specifications".
- ▶ Rectify the problems which have caused fouling of the spark plug.

Possible causes are:

- Too much oil in fuel mix.
- Dirty air filter.
- Unfavorable running conditions.

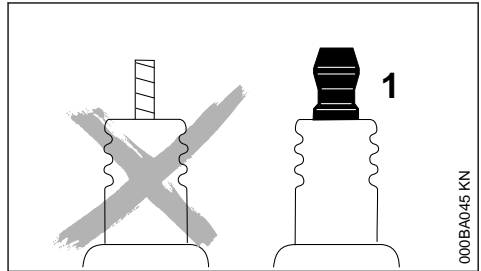


## ! WARNING

Arcing may occur if the adapter nut (1) is loose or missing. Working in an easily combustible or explosive atmosphere may cause a fire or an explosion. This can result result in serious injuries or damage to property.


- ▶ Use resistor type spark plugs with a properly tightened adapter nut.

### 19.3 Installing the spark plug

- ▶ Screw in spark plug
- ▶ Firmly press the spark plug connector onto the spark plug.

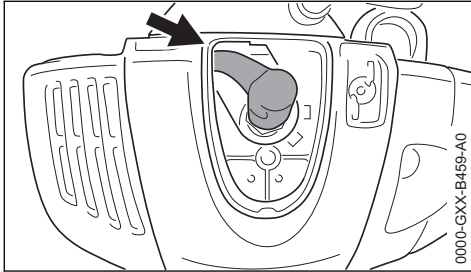

- ▶ Align the spark plug connector so that the ignition cable points to the upper left corner (arrow).

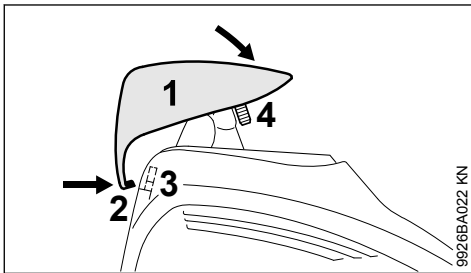

- ▶ Place the cap (1) on the hood from behind and at a slight angle, pressing the nose (2) into the opening (3) of the hood.
- ▶ On the front, swivel the cap onto the hood, screw in the screw (4) and tighten.

## 20 Engine Running Behavior

If engine running behavior is still unsatisfactory after the air filter has been serviced and the carburetor and throttle cable have been adjusted correctly, the cause may also be in the muffler.

Have the muffler checked for contamination (coking) by a servicing dealer!

STIHL recommends that maintenance and repair work be carried out only by authorized STIHL dealers.


## 21 Storing the Machine

If out of use for periods of about 30 days or longer

- ▶ Drain and clean the fuel tank in a well-ventilated area.
- ▶ Dispose of fuel properly in accordance with local environmental requirements.
- ▶ If a manual fuel pump is fitted: Press the manual fuel pump at least 5 times.
- ▶ Start the engine and run it at idling speed until it stops
- ▶ Remove, clean and inspect the cutting attachment. Treat metal cutting attachments with protective oil.
- ▶ Thoroughly clean the machine
- ▶ Store the machine in a dry and safe place, out of the reach of children and other unauthorized users

## 22 Sharpening Metal Cutting Blades

- ▶ Use a sharpening file (see "Special Accessories") to sharpen dull cutting attachments. In case of more serious wear or nicks: Resharpener with a grinder or have the work done by a dealer – STIHL recommends a STIHL servicing dealer.
- ▶ Sharpen frequently, take away as little metal as possible – two or three strokes of the file are usually enough.

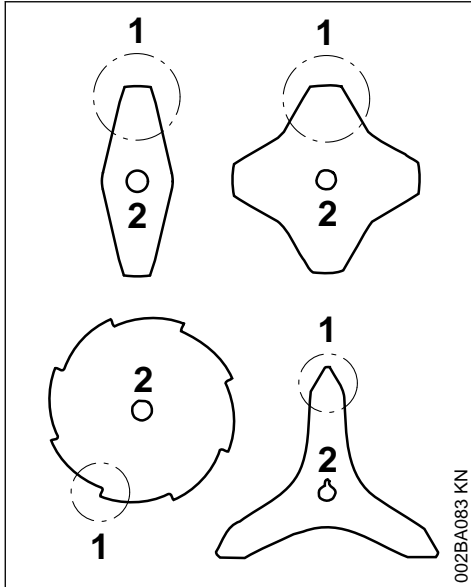

- ▶ Resharpener the teeth (1) uniformly – do not alter the contour of the parent blade (2) in any way.


See cutting attachment packaging for additional sharpening instructions. Keep the packaging for future reference.

## 22.1 Balancing

- ▶ After resharpening about 5 times, check the cutting attachment for out-of-balance on a STIHL balancer – see “Special Accessories” – or have it checked by a dealer and re-balanced as necessary – STIHL recommends a STIHL servicing dealer.

## 23 Maintaining the Mowing Head

### 23.1 Placing power tool on the ground

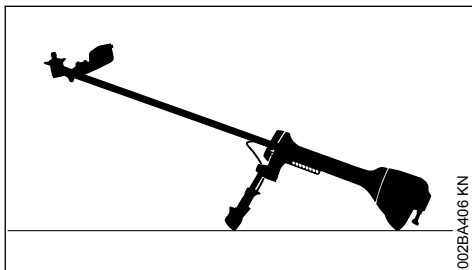

- ▶ Shut off the engine.
- ▶ Lay your power tool on its back so that the cutting attachment mounting face is pointing up.

### 23.2 Replacing Nylon Line

Always check the mowing head for signs of wear before replacing the nylon line.



If there are signs of serious wear, replace the complete mowing head.

The nylon mowing line is referred to as "nylon line" or "line" in the following.

The mowing head is supplied with illustrated instructions for replacing the nylon line. Keep the instructions for the mowing head in a safe place.

- ▶ If necessary, remove the mowing head.

### 23.3 Adjusting Nylon Line

#### STIHL SuperCut

Fresh line is advanced automatically if the remaining line is **at least 6 cm (2 1/2 in)** long. The blade on the deflector trims overlong lines to the correct length.

#### STIHL AutoCut

- ▶ With the engine running, hold the rotating mowing head above the grass surface.
- ▶ Tap it on the ground once – fresh line is advanced and the blade on the deflector trims it to the right length.

Fresh line is advanced every time the mowing head is tapped on the ground. For this reason observe the mowing head's cutting performance during operation. If the mowing head is tapped on the ground too often, the line limiting blade will unnecessarily cut off unused lengths of nylon line.

Line feed operates only if both lines are still at least **2.5 cm (1 in)** long.

#### STIHL TrimCut



**To reduce the risk of injury**, always shut off the engine before adjusting the nylon line by hand.

- ▶ Pull the spool up – rotate it about 1/6 turn counterclockwise until it engages – and allow it to spring back.
- ▶ Pull ends of the lines outward.

Repeat the above procedure as necessary until both lines reach the limiter blade on the deflector.

Rotating the spool from one stop to the next advances about **4 cm (1 1/2 in)** of fresh line.

## 23.4 Replacing Nylon Line

### STIHL PolyCut

Precut lengths of nylon line can be fitted to the PolyCut in place of the cutting blades.

### STIHL DuroCut, STIHL PolyCut



**WARNING**

**To reduce the risk of injury**, always shut off the engine before refilling the mowing head.

- ▶ Fit precut lengths of nylon line in the mowing head as described in the instructions supplied.

## 23.5 Replacing Cutting Blades

### 23.5.1 STIHL PolyCut

Always check the mowing head for signs of wear before installing new cutting blades.



**WARNING**

If there are signs of serious wear, replace the complete mowing head.

The thermoplastic cutting blades are referred to as "blades" in the following.

The mowing head is supplied with illustrated instructions for replacing the blades. Keep the instructions for the mowing head in a safe place.




**WARNING**

**To reduce the risk of injury**, always shut off the engine before installing the blades.

- ▶ Remove the mowing head.
- ▶ Replace blades as shown in the illustrated instructions.
- ▶ Mount the mowing head on the machine.


## 24 Inspection and Maintenance by User

### 24.1 Clamped Area of Handlebar

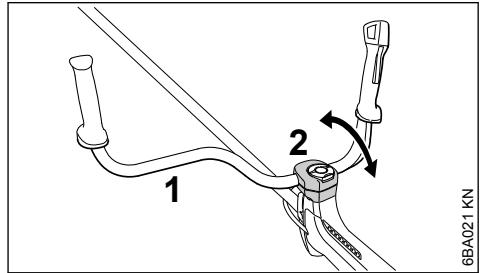

- ▶ Check the freedom of movement of the handlebar (1) in the clamp moldings (2) at regular intervals.

#### Handlebar is difficult to move

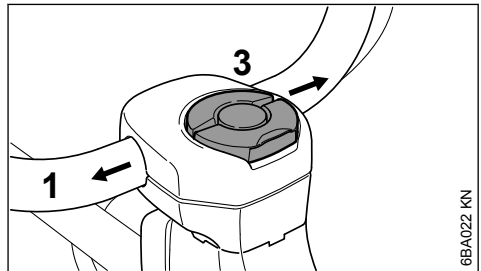

- ▶ Loosen the wing screw (3) just enough for the handlebar to be moved.
- ▶ Push the handlebar (1) sideways out of the clamp.
- ▶ Soak a cloth in a clean, non-flammable cleaning solution – do not use a cleaning agent containing oil or grease.
- ▶ Thoroughly clean the clamp area of the handlebar with the cloth and cleaning solution.
- ▶ Line up the handlebar and secure it in position with the wing screw.

#### Handlebar cannot be clamped firmly in position


- ▶ Release handlebar in clamp as described under "Handlebar is difficult to move".
- ▶ Degrease clamp area on handlebar and in clamp moldings.
- ▶ Line up the handlebar and secure it in position with the wing screw.

## 25 Inspections and Maintenance by Dealer

### 25.1 Maintenance work

STIHL recommends that all maintenance and repairs be carried out by STIHL dealers.

### 25.2 Fuel pickup body in tank

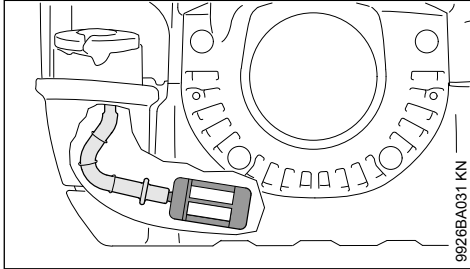

- ▶ Check the pickup body in the fuel tank annually and have it replaced when necessary


The pickup body should rest in the area of the tank indicated in the drawing.

### 25.3 Spark Arrestor in Muffler and Spacer



#### WARNING


To reduce the risk of damage to persons or objects from contact with hot parts, never operate the machine without a spacer, or with the spacer damaged.

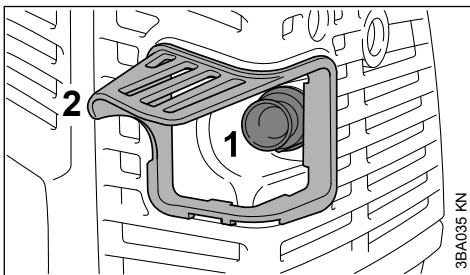

- ▶ If engine performance deteriorates, have the spark arresting screen (1) in the muffler checked
- ▶ Check the spacer (2) for damage
- ▶ Have damaged spacer (2) replaced immediately


### 25.4 Anti-vibration elements

#### FS 260 C

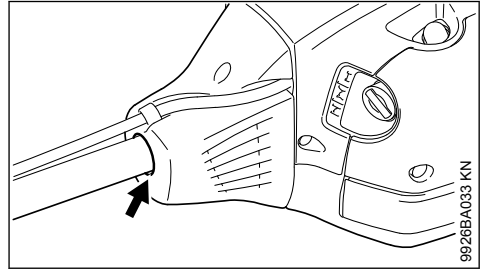

A vibration-absorbing rubber element is installed between the engine and the shaft. Have it checked in the event of noticeable wear or constantly increased vibration.


#### FS 360 C

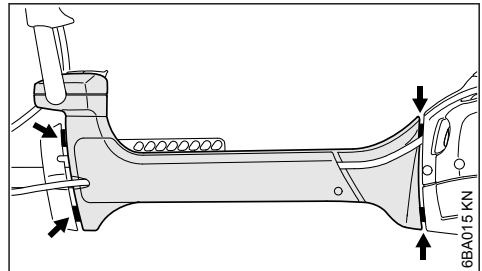

Four anti-vibration elements (arrows) for damping vibrations are installed between the engine and the shaft. Have them checked in the event of a noticeable constant increase in vibration levels.

Both vibration gaps (arrows) of the anti-vibration system are set to a fixed dimension at the factory and are equally wide. If there is a large difference between the two vibration gaps and/or one of the vibration gaps is closed, always have the anti-vibration system serviced by a specialist dealer.

## 25.5 Wear guard on FS 360 C anti-vibration housing

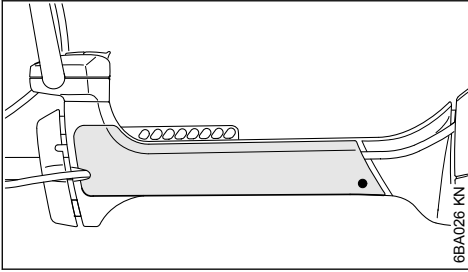

The wear guard on the side of the housing for the anti-vibration system is easy to replace. During work, the guard may wear due to the movement of the machine against the side plate of the harness; it can be replaced when necessary.

## 26 Maintenance and Care


The following intervals apply for normal operating conditions. The specified intervals must be shortened accordingly when working for longer than normal or under difficult cutting conditions (extensive dust, etc.).		Before starting work	At the end of work and/or daily	Whenever tank is refilled	Weekly	Monthly	Annually	If faulty	If damaged	As required
Complete machine	Visual inspection (condition, leaks)	X		X						
	Clean		X							
	Replace any damaged parts	X							X	
Control handle	Function test	X		X						
Air filter, paper filter	Visual inspection					X		X		
	Replace <sup>1)</sup>								X	
Air filter, plastic fabric filter	Visual inspection					X		X		
	Clean									X
	replace								X	X
Fuel tank	Clean									X
Manual fuel pump (if present)	check	X								
	Repair <sup>2)</sup>								X	
Fuel pickup body in fuel tank	Check <sup>2)</sup>							X		
	Replace <sup>2)</sup>						X		X	X
Carburetor	Check idle adjustment, cutting attachment must not turn	X		X						
	Adjust idle speed									X
Spark plug	Set electrode gap							X		
	Replace after every 100 hours of operation									
Intake port for cooling air	Visual inspection		X							



The following intervals apply for normal operating conditions. The specified intervals must be shortened accordingly when working for longer than normal or under difficult cutting conditions (extensive dust, etc.).		Before starting work	At the end of work and/or daily	Whenever tank is refilled	Weekly	Monthly	Annually	If faulty	If damaged	As required
	Clean									X
Cylinder fins	Clean <sup>2)</sup>						X			
Spark arresting screen in muffler	Check if installed	X								
	Check or replace <sup>2)</sup>						X			
Spacer, shim	check	X								
	Replace <sup>2)</sup>	X						X		
All accessible screws, nuts and bolts (not adjusting screws)	Tighten <sup>3)</sup>									X
Anti-vibration elements	Visual inspection <sup>4)</sup>	X						X		
	Replace <sup>2)</sup>								X	
Cutting attachment	Visual inspection	X		X						
	replace								X	
	Check for secure fit	X		X						
Metal cutting attachment	sharpen	X								X
Safety information label	replace								X	


<sup>1)</sup>Only if there is a noticeable loss of engine power  
<sup>2)</sup>STIHL recommends that this work be done by a STIHL servicing dealer  
<sup>3)</sup>Tighten the screws for the muffler after a running time of 10 to 20 hours after commissioning  
<sup>4)</sup>see chapter "Inspection and Maintenance by Dealer", section "Antivibration Elements"

## 27 Main Parts

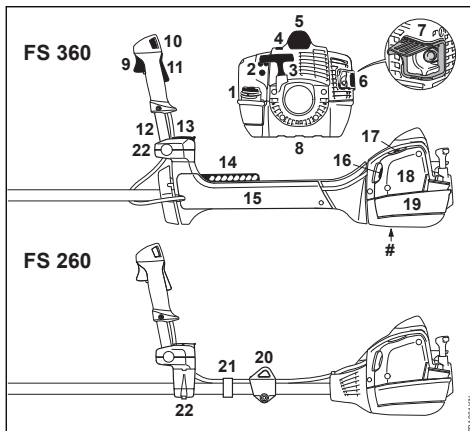


- 1 Fuel cap
- 2 Carburetor adjusting screw
- 3 Starter grip
- 4 Shutter (winter operation)
- 5 Spark plug boot
- 6 Muffler with spark arrestor
- 7 Spacer, shim
- 8 Guard plate
- 9 Throttle trigger
- 10 Stop switch
- 11 Throttle trigger lockout
- 12 Handlebar
- 13 Clamping screw
- 14 Carrying strip
- 15 Protection against wear

- 16 Choke lever
- 17 Manual fuel pump
- 18 Filter cover
- 19 Fuel tank
- 20 Carrying ring
- 21 Throttle cable retainer
- 22 Handle support
- # Serial number

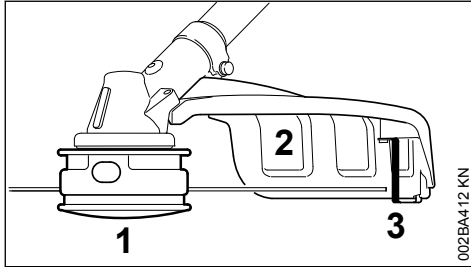


002BA412 KN

- 1 Mowing head
- 2 Deflector for mowing heads only
- 3 Blade

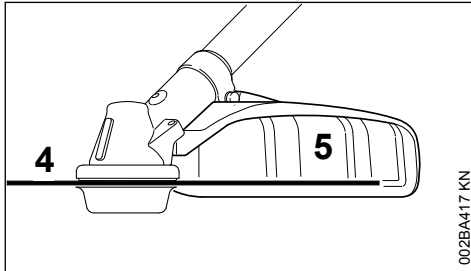

002BA417 KN


- 4 Metal mowing attachment
- 5 Deflector (for metal mowing attachments only)

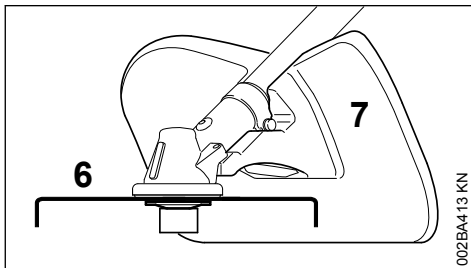

002BA413 KN

- 6 Shredder blade

- 7 Shredder deflector (only for shredding with shredder blades)

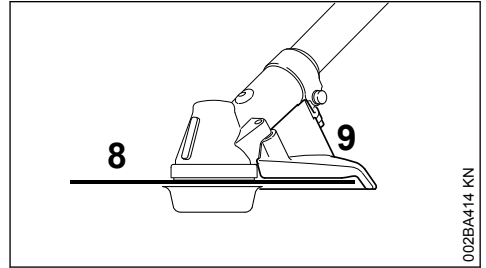

002BA414 KN

- 8 Circular Saw Blade
- 9 Limit stop (for circular saw blades only)

## 28 Specifications

### 28.1 Engine

Single-cylinder two-stroke engine

#### 28.1.1 FS 260, FS 260 C

Displacement:	41.6cm <sup>3</sup>
Cylinder bore:	42 mm
Piston stroke:	30 mm
Engine power to ISO 8893:	2.0 kW (2.7 hp) at 9000 1/min
Idle speed:	2800 rpm
Cut-off speed (nominal value):	12500 rpm
Max. output shaft speed (cutting attachment drive):	9000 rpm

#### 28.1.2 FS 360 C

Displacement:	37.7cm <sup>3</sup>
Cylinder bore:	40 mm
Piston stroke:	30 mm
Engine power to ISO 8893:	1.7 kW (2.3 hp) at 8500 1/min
Idle speed:	2800 rpm
Cut-off speed (nominal value):	12500 rpm
Max. output shaft speed (cutting attachment drive):	9000 rpm

### 28.2 Ignition system

Electronic magneto ignition

Spark plug (suppressed):	NGK CMR6H
Electrode gap:	0.5 mm

### 28.3 Fuel system

All-position diaphragm carburetor with integral fuel pump

Fuel tank capacity:	750 cm <sup>3</sup> (0.75 l)
---------------------	------------------------------

## 28.4 Weight

### without fuel, without cutting attachment and deflector

FS 260 C-E Z:	7.8 kg
FS 360 C-E Z:	8.5 kg

## 28.5 Overall length

### without cutting attachment

FS 260 C-E Z:	1685 mm
FS 360 C-E Z:	1790 mm

## 28.6 Equipment features

C	Note concerning comfort features
E	ErgoStart
Z	Spark arrester

## 28.7 Noise and Vibration Data

Noise and vibration data measurements on FS units include idling and rated maximum speed with the same duration of exposure.

For further details on compliance with Vibration Directive 2002/44/EC see [www.stihl.com/vib](http://www.stihl.com/vib).

### 28.7.1 Sound pressure level $L_p$ to ISO 22868

with mowing head

FS 260:	102 dB(A)
FS 260 C:	101 dB(A)
FS 360 C:	99 dB(A)

with metal mowing attachment

FS 260:	100 dB(A)
FS 260 C:	100 dB(A)
FS 360 C:	98 dB(A)

### 28.7.2 Sound power level $L_w$ to ISO 22868

with mowing head

FS 260:	114 dB(A)
FS 260 C:	113 dB(A)
FS 360 C:	112 dB(A)

with metal mowing attachment

FS 260:	111 dB(A)
FS 260 C:	112 dB(A)
FS 360 C:	110 dB(A)

### 28.7.3 Vibration measurement $a_{hv,eq}$ to ISO 22867

**with mowing head**    **Handle, left**    **Handle, right**

FS 260:	5.8 m/s <sup>2</sup>	5.7 m/s <sup>2</sup>
FS 260 C:	5.8 m/s <sup>2</sup>	5.7 m/s <sup>2</sup>
FS 360 C:	2.5 m/s <sup>2</sup>	2.0 m/s <sup>2</sup>

**with metal mowing attachment**    **Handle, left**    **Handle, right**

FS 260:	4.2 m/s <sup>2</sup>	4.6 m/s <sup>2</sup>
FS 260 C:	4.2 m/s <sup>2</sup>	4.6 m/s <sup>2</sup>
FS 360 C:	2.2 m/s <sup>2</sup>	1.8 m/s <sup>2</sup>

The K-factor in accordance with Directive 2006/42/EC is 2.0 dB(A) for the sound pressure

level and sound power level; the K-factor in accordance with Directive 2006/42/EC is 2.0 m/s<sup>2</sup> for the vibration level.

## 28.8 REACH

REACH is an EC regulation and stands for the Registration, Evaluation, Authorisation and Restriction of Chemical substances.

For information on compliance with the REACH regulation (EC) No. 1907/2006 see [www.stihl.com/reach](http://www.stihl.com/reach).

## 28.9 Exhaust Emissions

The CO<sub>2</sub> value measured in the EU type approval procedure is specified at [www.stihl.com/co2](http://www.stihl.com/co2).

The measured CO<sub>2</sub> value was determined on a representative engine in accordance with a standardized test procedure under laboratory conditions and does not represent either an explicit or implied guarantee of the performance of a specific engine.

The applicable exhaust emission requirements are fulfilled by the intended usage and maintenance described in this instruction manual. The type approval expires if the engine is modified in any way.


# 29 Maintenance and Repairs

Users of this machine may only carry out the maintenance and service work described in this user manual. All other repairs must be carried out by a servicing dealer.

STIHL recommends that you have servicing and repair work carried out exclusively by an authorized STIHL servicing dealer. STIHL dealers are regularly given the opportunity to attend training courses and are supplied with the necessary technical information.


When repairing the machine, only use replacement parts which have been approved by STIHL for this power tool or are technically identical. Only use high-quality replacement parts in order to avoid the risk of accidents and damage to the machine.

STIHL recommends the use of original STIHL replacement parts.

Original STIHL parts can be identified by the STIHL part number, the **STIHL** logo and the STIHL parts symbol  (the symbol may appear alone on small parts).

## 30 Disposal

Observe all country-specific waste disposal rules and regulations.

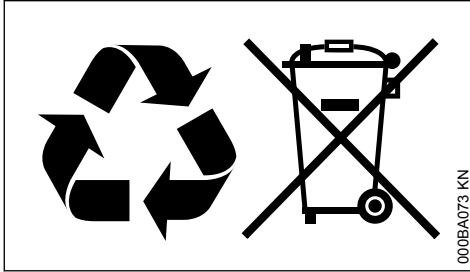

STIHL products must not be thrown in the garbage can. Take the product, accessories and packaging to an approved disposal site for environment-friendly recycling.

Contact your STIHL servicing dealer for the latest information on waste disposal.

## 31 EC Declaration of Conformity

ANDREAS STIHL AG & Co. KG  
Badstr. 115  
D-71336 Waiblingen  
Germany

declares under our sole responsibility that

Designation:	Clearing Saws
Make:	STIHL
Series:	FS 260 FS 260 C FS 260 C-E FS 360 C FS 360 C-E

Serial identification number: 4147

Displacement

all FS 260:	41.6 cm <sup>3</sup>
all FS 360:	37.7 cm <sup>3</sup>

conforms to the relevant provisions of Directives 2011/65/EU, 2006/42/EC, 2014/30/EU and 2000/14/EC and has been developed and manufactured in compliance with the following standards in the versions valid on the date of production:

EN ISO 11806-1, EN 55012, EN 61000-6-1

The measured and the guaranteed sound power level have been determined in accordance with Directive 2000/14/EC, Annex V, and standard ISO 10884.

### Measured sound power level

FS 260:	114 dB(A)
FS 260 C:	113 dB(A)
FS 360 C:	112 dB(A)

### Guaranteed sound power level

FS 260:	116 dB(A)
FS 260 C:	115 dB(A)
FS 360 C:	114 dB(A)

Technical documents deposited at:

ANDREAS STIHL AG & Co. KG  
Produktzulassung

The year of manufacture and serial number are applied to the product.

Done at Waiblingen, 03.02.2020

ANDREAS STIHL AG & Co. KG

pp

Dr. Jürgen Hoffmann

Director Product Certification & Regulatory Affairs

CE







[www.stihl.com](http://www.stihl.com)



0458-743-8321-C



0458-743-8321-C